



This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + *Refrain from automated querying* Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

About Google Book Search

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at <http://books.google.com/>

751

.5

75

UC-NRLF



181 31 8B


004


LIBRARY
OF THE
UNIVERSITY OF CALIFORNIA.

GIFT OF

Edward A. Rix

Class

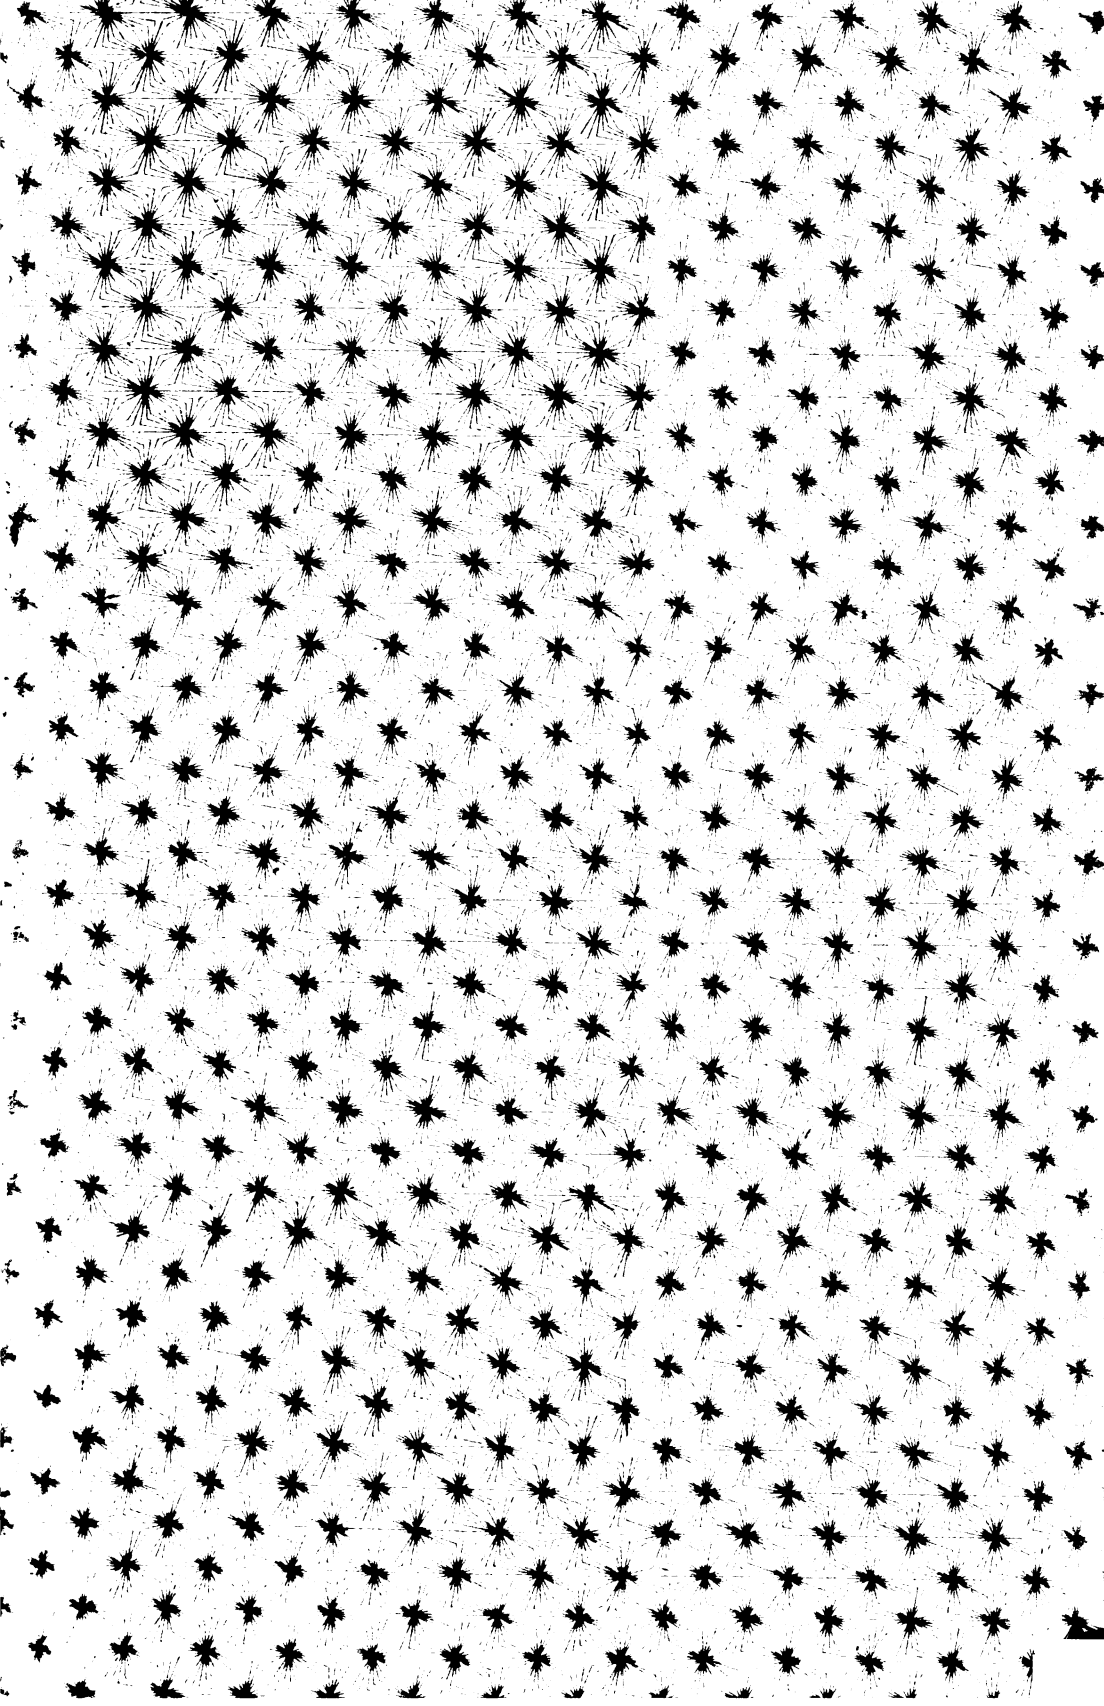







The Compression and Transmission of Illuminating Gas

A Thesis Read at the July, 1905, Meeting of the Pacific Coast Gas
Association.

Some Economics in High Pressure Gas Transmission

A Thesis Read at the September, 1906, Meeting of the Pacific Coast Gas
Association.

By Edward A. Rix

Mem. Am. Soc. M. E. Mem. Am. Soc. C. E. Assoc. Mem. Am. Soc. Mining Eng.
Mem. Pacific Coast Gas Assn.



PUBLISHED BY THE
PACIFIC COAST GAS ASSOCIATION
SAN FRANCISCO
1907

TP751
.5
R5

1876
1876
1876



THE COMPRESSION AND TRANSMISSION OF ILLUMINATING GAS.

The subject of illuminating gas compression is almost a new one, and the nature of the gas is so entirely different from that of air that we are obliged to consider the question mainly from the theoretical standpoint, backed up by a few indicator cards, which have been furnished us by gas compressors. But you may be assured that all of the data given herewith is eminently practical, because there has been eliminated all of the small variables that are important from a chemical standpoint, but which the advancing piston of a compressor cylinder takes little heed of.

We are not concerned about the candle power or the commercial utility of a gas, but simply with its weight and composition, and what may happen to it after it leaves the compressor cylinder is not the province of this paper.

All gases are sponge-like in that they hold various vapors from water vapor to carbon vapors, which they lose to a more or less extent when the sponge is squeezed as in the act of compressing in a cylinder, and what is squeezed out and how much of it is not essential to our discussion, and lies better in the realm of the technical gas engineer.

We have assumed, however, that inasmuch as when we compress a gas the temperature rises in a fixed ratio to the pressures, that there is no direct tendency for a gas to change its physical condition in the compressing cylinder, for an added temperature gives an added capacity for saturation, and this probably increases in about the same ratio as the volume diminishes during compression. So that for commercial purposes we can not be far wrong in assuming the physical condition of the gases as constant during the range of pressures that will be ordinarily met.

All phenomena of compression and expansion of

gases is intimately associated with temperature; in fact, the power to compress any gas adiabatically in foot-pounds is simply the difference in temperature between the gas before and after compression, multiplied by its weight in pounds, by its specific heat, and then by Joules' equivalent to convert heat units to foot-pounds. Expressed algebraically, this equation is:

$$L = J W C_p (T - T_0) \text{ where}$$

J is Joules' equivalent = 772.

W = the weight in pounds avoirdupois to be compressed.

C_p is the specific heat of the gas at constant pressure.

T_0 is the initial absolute temperature.

T is the final absolute temperature.

L is the work expressed in foot-pounds.

This is the general equation for the compression of any gas adiabatically.

In glancing at this equation, the first stumbling block we strike is C_p , the specific heat of the gas at constant pressure, and this must be first determined. After that we must discover some means of finding T , the final temperature.

To anticipate a little, it may be stated here that these temperatures are all functions of the ratio of the specific heats of gas at constant pressure, and at constant volume.


It is then our first duty to understand about these two specific heats and to know how to determine them for any gas, and the rest is simple.

The specific heat of any substance is the amount of heat one pound of that substance will absorb to raise its temperature 1° Fah., the specific heat of water being 1.

When a gas is heated two different results may be obtained, depending upon whether the gas is allowed to expand and increase its volume when heated, the pressure remaining constant, or whether the air is confined, the volume remaining constant, and the pressure increased. The amount of heat to raise the temperature of a gas 1° under these two conditions is different.

TABLE 1.

JULY 1905

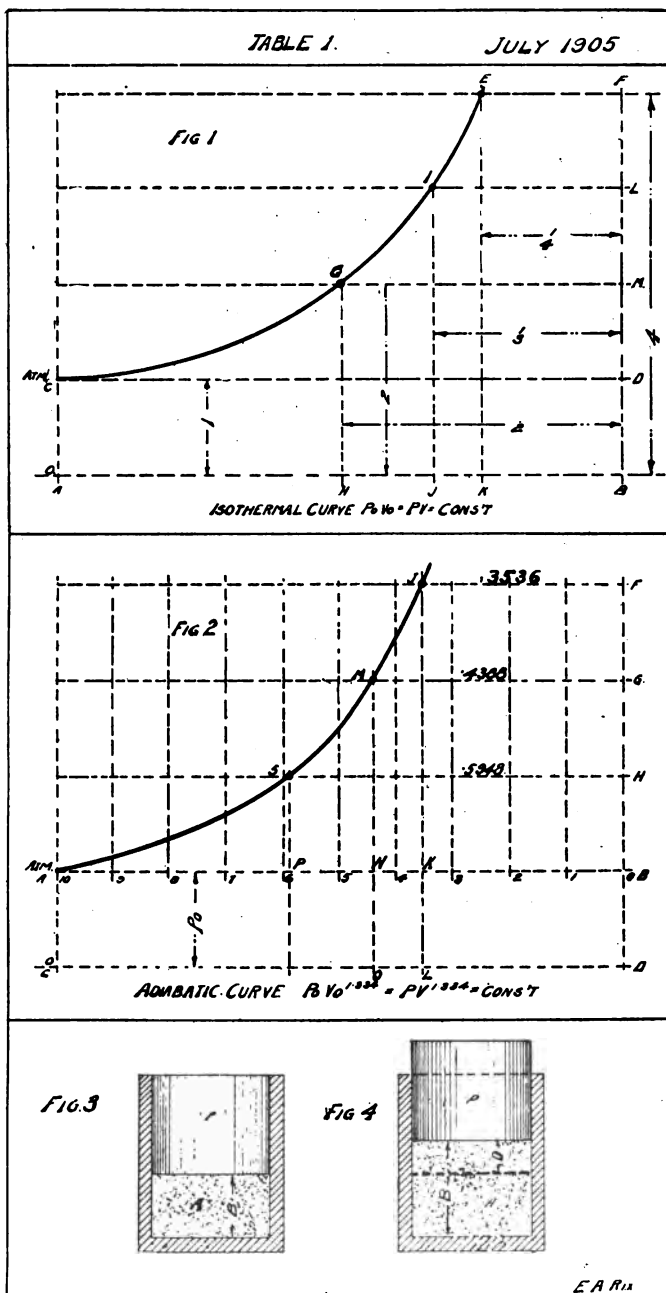

therefore the specific heat is different. The former is called—Specific heat at constant pressure, and the latter—Specific heat at constant volume.

Referring to Table 1, Figure 3, if we have a cylinder *A*, containing one pound of gas at atmospheric pressure, and a piston *P*, without weight, but having an area of one square foot, and heat the gas until the temperature has risen 1° Fah., the gas will have expanded by the small amount *d* as in Figure 4, and raised the piston. This expansion is 1/460 of the original volume, at 0° Fah.

It is evident that inasmuch as the piston has raised and displaced the atmosphere, that work has been done, which must have absorbed heat in addition to that necessary to raise the temperature of the air 1°. If the piston was fastened, as in Figure 3, the gas would have required just that less heat to raise it 1° as was required to lift the piston through the distance $d=1/460$ of its volume. The amount of heat required in the first instance is called specific heat at constant pressure, and the latter at constant volume.

Specific heat of most of the gases at constant pressure has been determined by Regnault and others experimentally, and the symbol is C_p .

The amount of work done in lifting the piston through the distance *d* is measured the same as the work done by any piston by multiplying the pressure on the piston by the distance passed through. The area multiplied by the distance is the volume, which may be expressed by *V*. The distance *d* is 1/460 at 0° Fah., or may be expressed by $\frac{1}{T}$.

Let *P* be the pressure, and *R* the foot-pounds of work done, then

$\frac{VP}{T}=R$ and this is called the Simple Gas Equation, and about it hangs many important deductions.

R is a constant for any gas, because inasmuch as gas expands uniformly for each 1° of heat, any volume as V_1 multiplied by its corresponding P_1 and divided

TABLE 2 CRUDE OIL GAS MANUFACTURED AT OAKLAND CAL BY CALIFORNIA GAS AND ELECTRIC COR						JUNE 1905
1	2	3	4	5	6	7
SYMBOL	PERCENT OF VOLUME	MEAN LBS CUBIC FOOT PER CUBIC FT	Cp	PERCENT OF VOLUME X WEIGHT PER CUBIC FT	PERCENT OF VOLUME X WEIGHT PER CUBIC FT	
Ce H4	7	.0780922	.404	.54664	220842	$\frac{V_0 P_0}{P} : P \cdot \frac{144 \times \frac{1337714.7}{492}}{492}$
CH4	28.3	044668	.5929	1.26390	749350	$P = \frac{30.38 \times 144 \times 147}{492} = 133.2$
H	51.9	005594	.3409	.28032	989700	$C_1 \cdot C_p - P = .6884 - \frac{133.2}{772} :$
CO	5	.0780922	.2479	.39045	.096793	$= .6884 - .1725 = .5159$
CO2	3	.122760	.217	.96928	.079167	
N	4.8	.078371	.2458	.87618	.091711	
O		.098180	.21751			
	100.00			3.23577	2.227563	$C_p = \frac{.6884}{.5159} = 133.4 = Y$
				= .0323577	.022275 ÷	$\frac{Y}{Y-1} = 4 \quad \frac{Y-1}{Y} = .2504$
				PER CUBIC FOOT	.0323577	$L = 8467 \left(\frac{Y}{Y-1} - 1 \right)$ FOOT PER MOLE
					.6884 = Cp	2.4 M.

NOTE - SPEC GRAM 402 OBSERVED. SPEC GRAM 4008 CALCULATED

by its corresponding temperature T_1 will equal R , or to put it algebraically,

$$\frac{VP}{T} = \frac{V_1 P_1}{T_1} = \frac{V'' P''}{T''} = R = \text{Constant}$$

R being always in foot-pounds, if we divide it by Joules' equivalent 772, which is, as you know, the amount of foot-pounds equal to 1 heat unit, and which is always denoted by J , we shall have the amount of heat units that were converted into work to raise the piston, and this amount of heat, we know, must be the difference between the specific heat at the constant pressure and the specific heat at constant volume, or,

$$\frac{R}{J} = C_p - C_v$$

from which we have

$$C_v = C_p - \frac{R}{J}$$

an equation from which the specific heat at constant volume may be determined for any gas within the limits of its stability, and certainly within the commercial pressures you are likely to encounter.

For a perfect gas, these specific heats are practically constant; that is, they are not affected by pressure or temperature, but so far hydrogen and air appear to be nearer than any other gases. CO and CO_2 , which are inferior components of illuminating gas, as it is now made, show the greatest deviation, but not enough to render their vagaries of moment in the consideration of the power question, consequently all the following data have been calculated on the basis of the simple gas law.

$$\frac{PV}{T} = R = \text{Constant.}$$

As an example showing how to calculate the specific heat at constant volume, let us take $C_2 H_4$. This gas have been calculated on the basis of the simple gas law. values ascribed to Regnault in the references we have at hand.

Upon applying the simple gas equation to the Reg-

TABLE 3. CRUDE OIL GAS MANUFACTURED AT FRESNO CAL. BY CALIFORNIA GAS AND ELECTRIC COR. JUNE 1905						
1	2	3	4	5	6	7
SYMBOL	PERCENT OF VOLUME	WEIGHT PER CUBIC FOOT 32°F AND 1 ATM	C_p	PERCENT OF VOLUME X WEIGHT PER CUBIC FOOT	PERCENT OF VOLUME X WEIGHT PER CUBIC FOOT X C_p	
C_2H_4	5	.0780322	.404	.39046	.151745	$\frac{V_0 P_0}{T_0} = R = \frac{144 \times .078733 \times 14.7}{492}$
CH_4	29.7	.044668	.5329	.132640	.186420	
H	53.4	.005594	.3409	.30968	.105700	$R = \frac{35.46 \times 144 \times 14.7}{492} = 151$
CO	5	.0780322	.2479	.39045	.086793	
CO ₂	1	.1227603	.217	.12276	.026577	$C_p = C_p - \frac{f}{T} = .2724 - \frac{.151}{772} = .2724$
N	3.9	.078371	.24380	.30564	.074515	$-.2956 = .5768$
O		.089180	.21751			
	100.00					
				$\frac{2.84539}{.028453} = \text{PER CUBIC FOOT}$	$\frac{2.19775}{.0219775} =$	$\frac{C_p \times .2724}{C_p \times .5768} = 1.339 = Y$
					$.028453 =$	$\frac{Y-1}{Y} = .253 \quad \frac{Y}{Y-1} = 3.95$
					$.1724 \times C_p$	$L = 836 \left(\frac{Y-1}{Y} \right) \text{ FOOT LBS.}$
NOTE: SPEC. GRV. .353 OBSERVED. SPEC. GRV. .3524 CALCULATED						F.A.R.A.

nault value there was a large discrepancy, and it will be interesting no doubt to make the calculations here, and thus make them serve the double purpose of showing how to determine the specific heat at constant volume and to point out the error.

Regnault gives the C_p of $C_2 H_4$ to be .404, and C_v to be .173. The weight per cubic foot to be .0780922, or 12.8 cubic feet in one pound at 32° Fah.

If, now, one pound, or 12.8 cubic feet, be heated to 1° Fah. and allowed to expand, the simple gas equation

$$\frac{P V}{T^{\circ}} = R \text{ will give at } 32^{\circ}$$

$$\frac{14.7 \times 144 \times 12.8}{492} = R = 55.$$

Fifty-five foot-pounds of work has been performed by the gas in expanding against the atmosphere; to convert this into heat units we divide by Joules' equivalent, 772.

$$\frac{55}{772} = .07124 \text{ units of heat.}$$

Inasmuch as

$$C_v = C_p - \frac{R}{J} \text{ and } \frac{R}{J} = .07124$$

we have $C_v = .404 - .07124 = .3327$, instead of .173 as determined by Regnault. The ratio between the two specific heats forms the basis for all the calculations for the relations between pressure, volume, and temperature in compressing gas, and that is why we must be particular about these specific heat factors.

$\frac{C_p}{C_v} = \gamma$ (gamma), which we shall discuss further on, and which is brought in now simply as additional proof about the figures which we have just obtained for $C_2 H_4$.

For $C_2 H_4$, using Regnault's values, we have

$$\gamma = \frac{.404}{.173} = 2.33$$

for our values

TABLE 4 CRUDE OIL GAS MANUFACTURED AT HAPPY VALLEY CAL. BY CALIFORNIA GAS AND ELECTRIC COR JUNE 1905						
1	2	3	4	5	6	7
SYMBOL	PERCENT OF VOLUME	WEIGHT PER CUBIC FOOT 32° FAH.	C_p	PERCENT OF VOLUME X WEIGHT PER CUBIC FOOT	PERCENT OF VOLUME X WEIGHT PER CUBIC FOOT	
C_2H_4	10.3	.0780922	.404	.00435	.324967	$\frac{V_0 P_0}{T_0} : P = \frac{14.4 \times 28.7 \times 14.7}{4.92} \times 14.7$
CH_4	26	.044668	.5929	.116136	.688530	$R = \frac{28.70 \times 14.4 \times 14.7}{4.92} = 114.8$
H	46	.005594	.9409	.25732	.071210	$C_1 \cdot C_p - \frac{P}{T} = .6015 - \frac{114.8}{772}$
CO	6	.0780922	.2479	.46865	.116150	$= .6015 - .1487 = .4528$
CO ₂	3	.1227609	.217	.36828	.073167	$C_p \cdot \frac{.6015}{C_v} = .1928 = 4$
N	8.4	.078371	.24880	.6691	.160340	$C_v = .4528$
O	.3	.089180	.21751	.02075	.005218	$\frac{Y-L}{Y} = .247 \quad \frac{Y}{Y-1} = 4.054$
	100.00			3.74492 $= .0374492$ Per Cubic Foot	2.252672 $.0225267$ $\div .0374492$ $= .6015 = C_p$	$L = 0.573 \left(\frac{T}{T_0} - 1 \right) \text{ foot lbs}$
NOTE SPEC GRAM .464 CALCULATION						L A R L

$$y = \frac{.404}{.3327} = 1.214.$$

In reading a new book by Travers on the study of gases (page 275), he gives some very interesting calculations to show the limiting values of $\frac{C_p}{C_v}$ or y .

His conclusions are that for a monoatomic gas within the limits of the simple gas equation $\frac{PV}{T} = R$, the values of $\frac{C_p}{C_v}$ can never exceed 1.667, and the value for a diatomic gas should range about 1.4 and the polyatomic gases still less, until we reach the value of 1, where, of course, there should be no expansion work at all when heat was applied.

We can see, therefore, that the value $\frac{C_p}{C_v}$ of 2.33 from Regnault's values is an impossibility, the maximum possible value being only 1.667, and $C_2 H_4$ being the polyatomic gas, its value would be less than 1.4, all of which indicates that our figures $\frac{C_p}{C_v} = 1.214$ are approximately correct.

It will now be necessary to apply our understanding of these principles and try and determine the values of the specific heats for illuminating gas. There seems to be plenty of data about the specific heat at constant pressure for gas mixtures, but nothing about the specific heat at constant volume.

Reference is now made to the Tables 2, 3, 4, 5, 6, 7, and 8, which show the composition and heat properties of seven different gases and the methods employed in determining the weights, specific gravities, and specific heats.

Column 1 is the chemical symbol for the different components.

Column 2 is the percentage by volume of the different components.

Column 3 gives reliable weights per cubic foot.

TABLE 5 CARBURETTED WATER GAS PURIFIED SAN FRANCISCO, GAS CO. NORTH BEACH					DEC 14TH 1897	
1	2	3	4	5	6	7
SYMBOL	PERCENT OF VOLUME	WEIGHT PER CUBIC FOOT 32°F	C_p	PERCENT OF VOLUME X WEIGHT PER CU FT	PERCENT OF VOLUME X WEIGHT PER CU FT	
C_2H_4	9.2	.0780922	.404	.72842	.29427	$\frac{V_0 P_0}{V_1} = R = \frac{14.4 \times .07677 \times 14.7}{4.92}$
CH_4	22.2	.044668	.5329	.93145	.38280	
H	35.1	.005594	.3409	.19610	.66850	$R = \frac{21.4 \times 14.4 \times 14.7}{4.92} = 92.02$
CO	25.2	.0780922	.2479	.196786	.48181	
CO_2	3	.1227603	.217	.36810	.07387	$C_v = C_p - \frac{R}{J} = .47 - \frac{92.02}{772}$
N	4.3	.078371	.24380	.38367	.09352	$= .47 - .1192 = .3508$
O	4	.089180	.21751	.03564	.00772	
	100.00			.467124	.221949	$\frac{C_p}{C_v} = \frac{.47}{.3508} = 1.34 = \gamma$
				.04671	.0221949	$\frac{\gamma - 1}{\gamma} = .254 \quad \frac{\gamma}{\gamma - 1} = 3.97$
				PER CUBIC FOOT	$\frac{3}{4} = .04671$	
					$= .47 = \phi$	
NOTE SPEC GRAV .578 AT 32°						$L = 8403 \left(\frac{\gamma}{\gamma - 1} - 1 \right)$ FOOT LBS
						F.A.R.X

TABLE 6 COAL GAS MANUFACTURED AT HUDSON MASS. ANALYZED BY STATE INSPECTOR OF GAS						
1	2	3	4	5	6	7
SYMBOL	PERCENT OF VOLUME	WEIGHT PER CUBIC FOOT 32° F.	C_p	PERCENT OF VOLUME A WEIGHT PER CUBIC FOOT	PERCENT OF VOLUME A WEIGHT PER CUBIC FOOT	
C_2H_4	5.31	.0780922	.404	.46151	.18644	$\frac{V_0 P_0}{P_1} = R = \frac{144 \times .03732 \times 14.7}{492}$
CH_4	37.31	.044668	.5929	.169306	.100377	
H	45.52	.005594	.9409	.25463	.86793	$P = \frac{90.4 \times 144 \times 14.7}{492} = 130.72$
CO	5.60	.0700922	.2479	.43730	.10840	
CO_2	1.07	.1227609	.217	.13128	.02847	$C_1 = C_p - \frac{P}{P_1} = .683 - \frac{130.72}{772}$
N	9.84	.078971	.24380	.30094	.07118	$= .683 - .1693 = .5137$
O	.15	.089180	.21751	.01337	.00230	$C_p = \frac{.683}{C_1} = \frac{.683}{.5137} = 1.33 = Y$
	100.00			$\frac{P}{C_1} = \frac{.683}{.5137} = 1.33 = Y$	$\frac{Y-1}{Y} = .240$	$\frac{Y}{Y-1} = 4$
NOTE SPEC. GRAV. 4.08						$L = 8467 \left(\frac{P}{P_1} \right) \text{ foot lbs}$
						E.A.R.I.X.

TABLE 7		CALIFORNIA. NATURAL GAS				SUNSON CAL.		DEC 20th 1901	
1	2	3	4	5	6	7			
SYMBOL	PERCENT OF VOLUME	WEIGHT PER CUBIC FOOT 32° F.	C_p	PERCENT OF VOLUME WEIGHT PER CUBIC	PERCENT OF VOLUME WEIGHT PER CUBIC				
$C_2 H_4$	0	.0780922	.404	.00000	.0000	$\frac{V_0 P_0}{P} = P = \frac{14.1 \times 34566}{492} \times 14.1$			
CH_4	92.38	.044668	.5329	.11530	2.4403	$P = \frac{21.9 \times 14.1 \times 14.1}{492} = 34.17$			
H	2.18	.005594	.8409	.01219	.0415	$C_p = C_p - \frac{P}{f} = .5664 - \frac{34.17}{772}$			
$C_2 H_2$	0	.0780922	.2479	.0000	.0000	$= .5664 - .122 = .4444$			
CO_2	.6	.1227603	.217	.07362	.01597	$C_p = .5664 = 1.28 = Y$			
N	4.44	.078371	.2430	.34796	.08481	$C_v = .4444$			
O	.2	.089180	.2151	.01789	.00997	$\frac{Y-L}{Y} = \frac{.219}{.41} = .41$			
	100.00			.456690 = .04566 PER CUBIC FOOT	2.58645 = .025864 + .04566 = .5664 = C_p	$L = 9335 \left(\frac{1-L}{Y} \right)$ PER LBS.			
NOTE SPEC. GRAV. .566 CALCULATED							E.A.R.X.		

TABLE 8 AVERAGE NATURAL GAS. KENT PAGE 649						1895
1	2	3	4	5	6	7
SYMBOL	PERCENT OF VOLUME	WEIGHT PER CUBIC FOOT 32°F	C_p	PERCENT OF VOLUME X WEIGHT PER CUBIC FOOT	PERCENT OF VOLUME X WEIGHT PER CUBIC FOOT	
C_2H_4	.31	.0780922	.404	.02421	.00978	$\frac{V_0 P_0}{T_0} = R = \frac{144 \times .053786 \times 14.7}{492}$
CH_4	92.6	.044668	.5929	.413551	2.45190	$R = \frac{21.84 \times 144 \times 14.7}{492} = 93.96$
H	2.18	.006394	.3409	.01219	.04155	$C_v = C_p - R = .57 - \frac{.04155}{.772} = .57 - .0538 = .5162$
CO	.50	.0780922	.2479	.03904	.00977	$= .57 - .122 = .448$
CO ₂	.26	.1227603	.217	.03642	.01223	
N	3.61	.078371	.2430	.28091	.06849	
O	.34	.089180	.21751	.03032	.00659	
	99.80			.457960	2.60030	$C_p = \frac{.57}{.448} = 1.272 = Y$
				= .045786	.026003	$\frac{Y-1}{Y} = \frac{.214}{.772} = .277$
				PER CUBIC FOOT	$\div .04578$	$L = 98.5 \left(\frac{Y}{Y-1} - 1 \right) = 5100 \text{ foot pounds}$
					= .57 = C_p	E.A. REX

NOTE - HAVE FIGURED 100% INSTEAD OF 99.80% AS ABOVE.

TABLE 3.																		
PROPERTIES OF ILLUMINATING GASES																		
32° FAH																		
JUNE 1905.																		
LOCATION OF WORKS	COMPOSITION BY VOLUME.							WEIGHT PER CU FT.	SPEC. GRAV.	C _p	C _v	Y	$\frac{Y}{Y-1}$	$\frac{Y-1}{Y}$	R	L. FOOT/Pound.		
	CH ₄	H ₂	CO	CO ₂	N	O												
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17		
FRESNO	5	297	554	5	1	3.9	0	0.20453	3524	7724	5768	1339	3.95	253	151	836($\frac{1}{2}$ -1)		
OAKLAND	7	283	313	5	3	48	0	0.323577	4008	6884	5153	1334	4.	25	133.2	846($\frac{1}{2}$ -1)		
HAPPY VALLEY	103	26	46	6	3	8.4	3	0.374492	464	6015	4520	1320	4.05	247	114.8	3573($\frac{1}{2}$ -1)		
								NATURAL GAS.										
AVERAGE NATURAL GAS	31	92.6	249	5	26	3.61	34	0.45786	567	57	4182	1272	4.67	214	93.96	3888($\frac{1}{2}$ -1)		
CAL. NATURAL GAS SUNSHINE CAL. DEC. 20TH, 04	0	92.58	218	0	6	4.44	2	0.4566	566	5664	4444	128	4.41	219	9417	3335($\frac{1}{2}$ -1)		
								COAL GAS										
HUDSON MRS. ANALYZED BY STATE INSPECTOR.	5.31	3791	4538	56	107	3.84	15	0.3292	403	683	5137	1.93	4.	249	190.7	8467($\frac{1}{2}$ -1)		
								CARBURETTED WATER GAS PURIFIED										
NORTH BEACH DEC. 14TH, 1897.	9.2	22.2	351	252	9.	4.9	4	0.4671	578	47	3789	1.34	3.97	254	92.02	8403($\frac{1}{2}$ -1) E.A.P.		

Column 4 gives the specific heat of each component gas as determined by Regnault and others.

Column 5 gives the product of the different percentages of the component gases and their weights per cubic foot, or Column 2 multiplied by Column 3. The total sum divided by 100 gives the weight of the gas per cubic foot.

Column 6 gives the product of Column 4 and Column 5 for specific heat, being a weight function. We must, in order to get the specific heat of the compound gas, take into consideration not only the percentages of the component parts, but the weights as well, and also the specific heat of each component. The sum of the products in column divided by 100, and then by the weight of one cubic foot of the compound gas, will give the specific heat at constant pressure C_p .

Column 7 gives the calculations to find the specific heat at constant volume and also R and $\frac{C_p}{C_v}$ or γ for each gas, and also various factors of γ which we will find useful later.

Table 9 concentrates Tables 2 to 8, so that we may study them easier.

You will note that our results cover quite a field, taking in California fuel oil gas, Massachusetts coal gas, Indiana natural gas, California natural gas, and California carburetted water gas, and after carefully studying their heat and power properties, as shown in Table 9, we have selected the fuel oil gas made in Oakland as having the best average properties for the purposes we have in view, and particularly as fuel oil gas is the one you will probably have most to deal with.

We may therefore consider our subject as having for a basis a gas with the following properties at 32° Fah.:

Weight per cubic foot, .0323577.

Cubic foot in one pound avoirdupois, 30.98.

Specific gravity, .4008.

$C_p = .6884$.

$C_v = .5159$.

$$y=1.334.$$

$$\frac{y^{-1}}{y}=.25.$$

$$\frac{y}{y^{-1}}=4.$$

$$R=133.2.$$

$$L=8467 \left(\frac{T}{T^{\circ}} - 1 \right)$$

A cubic foot of gas varies in weight according to the altitude or pressure, and also according to the temperatures. The law of this variation is expressed as follows:

Having given the weight of a gas for any temperature, or any pressure, then the weight at any other temperature or pressure will be as the ratio of absolute temperature or pressure, or

$$W'=W \frac{T}{T^{\circ}} \text{ or } W \frac{P}{P^{\circ}} \text{ where}$$

W =known weight.

T° and P° the known temperature or pressure and W' the desired weight.

For example:—Our standard gas weights at sea level, or 14.7 pounds absolute pressure, and 32° Fah., .03235 pounds per cubic foot; at 20 pounds gauge, or 34.17 pounds absolute, a cubic foot would weigh .03235

$\times \frac{34.17}{14.7} = .03235 \times 2.36 = .076346$ pounds, and at 60° Fah., instead of 32° Fah., this cubic foot would weigh

$.076346 \times \frac{520}{460} = .0819$ pounds, 460 being the absolute temperature of 0° and 520° the absolute temperature of 60° Fah. $= 460^{\circ} + 60^{\circ} = 520^{\circ}$.

Altitudes are nothing more or less than pressures less than sea level, and are treated just the same as pressures above the normal atmospheric.

Thus at 5225 feet the absolute pressure is 12.044, consequently gas at this altitude would weigh $\frac{12.044}{14.7}$ times the weight at sea level.

For your convenience it may be well to add here that when the barometric pressure is known, the atmospheric pressure is found by multiplying the barometric pressure by .4908, or $P^o = B \times .4908$.

For example.—When the barometer is 29.92 the atmospheric pressure is $29.92 \times .4908$, or 14.7, the normal sea-level pressure.

To find the atmospheric pressure when the altitude in feet is given, we have

$$P^o = 14.72 - \frac{57000 N - N^2}{100,000,000} \text{ in which}$$

N = altitude in feet.

For example.—To find the atmospheric pressure at 10,000 feet we have

$$P^o = 14.72 - \frac{57,000 \times 10,000 - (10,000)^2}{100,000,000} \text{ or}$$

$P^o = 14.72 - 4.7 = 10.02$, the atmospheric pressure required.

The foregoing rules will be all that is necessary to calculate all variations of weights due to pressure, altitude, or temperature, and relative volumes follow exactly the same laws as relative weights.

For convenience in many calculations Table 10 is given herewith, showing the pressure ratios, or $\frac{P}{P^o}$ for every pound from 1 to 110, and the volumes ratios will be inversely as the pressure ratios and consequently the reciprocal of the figures on the table.

This might be called a table showing also the rates of isothermal compression or expansion or Marriotte's law, the general formula for which is:

$P^o V^o = P V = \text{Constant}$, or in other words, the product of any pressure by its volume is always equal to the product of any other pressure by its volume, and this rule will be found useful in determining the contents of receivers, etc. It must always be remembered that in using these rules all temperatures must be alike, or corrections made according to the rules just given.

<u>PRESSURE RATIOS</u>			<u>JULY 1905</u>		<u>TABLE 10</u>
<i>Gauge</i>	$\frac{p}{p_0}$	<i>Gauge</i>	$\frac{p}{p_0}$	<i>Gauge</i>	$\frac{p}{p_0}$
1	1.068027	38	3.585026	75	6.102025
2	1.136054	39	3.653053	76	6.170052
3	1.204081	40	3.721080	77	6.238079
4	1.272108	41	3.789107	78	6.306106
5	1.340135	42	3.857134	79	6.374133
6	1.408162	43	3.925161	80	6.442160
7	1.476189	44	3.993188	81	6.510187
8	1.544216	45	4.061215	82	6.578214
9	1.612243	46	4.129242	83	6.646241
10	1.680270	47	4.197269	84	6.714268
11	1.748297	48	4.265296	85	6.782295
12	1.816324	49	4.333323	86	6.850322
13	1.884351	50	4.401350	87	6.918349
14	1.952378	51	4.469377	88	6.986376
15	2.020405	52	4.537404	89	7.054403
16	2.088432	53	4.605431	90	7.122430
17	2.156459	54	4.673458	91	7.190457
18	2.224486	55	4.741485	92	7.258484
19	2.292513	56	4.809512	93	7.326511
20	2.360540	57	4.877539	94	7.394538
21	2.428567	58	4.945566	95	7.462565
22	2.496594	59	5.013593	96	7.530592
23	2.564621	60	5.081620	97	7.598619
24	2.632648	61	5.149647	98	7.666646
25	2.700675	62	5.217674	99	7.734673
26	2.768602	63	5.285701	100	7.802700
27	2.836629	64	5.353728	101	7.870727
28	2.904656	65	5.421755	102	7.938754
29	2.972683	66	5.489782	103	8.006781
30	3.040710	67	5.557809	104	8.074808
31	3.108737	68	5.625836	105	8.142835
32	3.176764	69	5.693863	106	8.210862
33	3.244791	70	5.761890	107	8.278889
34	3.312818	71	5.829917	108	8.346916
35	3.380845	72	5.897944	109	8.414943
36	3.448872	73	5.965971	110	8.482970
37	3.516899	74	6.033998		

E. A. RIX

ISOTHERMAL COMPRESSION.

There are two methods of compressing any gas.

First.—Where the temperature remains unchanged during compression. This is called isothermal compression and is the ideal method never realized in practice.

Second.—Adiabatic compression, which is the kind we meet in practice where the heat developed by compression expands the air being compressed until it follows a different law from Marriotte.

While isothermal compression is not practical, it is necessary to know about it and how to make the calculations concerning it.

We have found that the volume ratios are inversely as the absolute pressure ratios in isothermal compression. Consequently if the pressure ratios are 1, 2, 3, and 4, the corresponding volumes will be 1, $\frac{1}{2}$, $\frac{1}{3}$, $\frac{1}{4}$. To show this graphically, refer to Table 1, Figure 1.

Let $A B$ be the line of 0 pressure or the perfect-vacuum line. $C D$ the intake line and we erect pressures ordinates $G H = 2 \times D B$ at a point H equal to $\frac{1}{2}$, $A B$ and $I J = 3 \times B D$ at a point $J = \frac{1}{3} A B$ and $E K = 4 \times B D$ at a point $K = \frac{1}{4}$ of $A B$ counting all volumes from $F B$ or the end of the piston stroke.

If we join the points $C G I E$ in a curved line, it will be the isothermal or logarithmic curve and it will be noted that the area

$$E F B K = 4 \times \frac{1}{4} = 1$$

$$I L B J = 3 \times \frac{1}{3} = 1.$$

$$G M B H = 2 \times \frac{1}{2} = 1$$

$$C D B A = 1 \times 1 \text{ or } 1$$

As found before, $P^0 V^0 = P' V' = \text{Constant}$, and the figure represents the ideal indicator card for isothermal compression for four compressions, counting from 0, and the above method will always be proper to lay out an isothermal curve, no matter what the intake pressure may be.

To find the work of compression and delivery isothermally

$P^0 V^0$ hyp. log. $\frac{P}{P^0}$ in foot-pounds in which

P^0 = Initial pressure absolute.

V^0 = Initial volume.

P = Final pressure.

L = Work required.

In all our calculations V^0 will be taken as one cubic foot.

For example:—How many foot-pounds of work are required to compress 1 cubic foot of gas at sea level to eighty pounds gauge pressure?

For sea level P^0 per square foot = $14.7 \times 144 = 2116.8$ pounds. Then

$$L = 2116.8 \text{ hyp. log. } \frac{P}{P^0}$$

Consulting Table 10, we find

$\frac{P}{P^0}$ for 80 pounds gauge = 6.442 the hyperbolic loga-

rithm of which is 1.863.

Substituting, we have

$$L = 2116.8 \times 1.863 = 3943 \text{ foot-pounds.}$$

If a table of hyperbolic logarithms is not at hand, it would be well to remember that hyp. log. = common log. $\times 2.3026$.

The $H P$ required for above work will be $\frac{3945}{33000} = .1195 H P$.

To find the $M E P$ of isothermal compression,

$M E P = P^0$ hyp. log. $\frac{P}{P^0}$ using the quantities in the previous example we have $M E P = 14.7 \times 1.863 = 27.38$ pounds. We know that $H P = \frac{M E P \times V}{33000}$

and for one cubic foot $V = 1 \times 144$. Consequently, using the last example,

$$H P = \frac{27.38 \times 1 \times 144}{33000} = .1195, \text{ the same result}$$

as before. $\frac{1 \times 144}{33000} = .00436$. Consequently a short

and convenient formula would be for isothermal compression $HP = .00436 \times MEP$.

It will be noted that none of the physical properties of gases enter into the above equations, consequently we must conclude that it takes the same power to compress one cubic foot of any gas isothermally to the same pressure, provided the ratios of pressures are the same.

ADIABATIC COMPRESSION.

We have before stated that isothermal compression is ideal, and not realized in practice. All of the work expended in compressing a gas is converted into heat instantly, and this increases both the temperature and the volume of the gas during compression, so that, instead of having a relation between pressure and volume ($P_0 V_0 = P V = \text{Constant}$), such as we found in isothermal compression, we now have a relation $P_0 V_0^\gamma = P V^\gamma = \text{Constant}$, or in other words, the gamma powers of each volume, multiplied by its corresponding pressure, is Constant. This is the equation of the Adiabatic curve. γ is the same that we found to be the ratio between the specific heat at constant pressure and that at constant volume. This relation can perhaps be fastened a little easier in the mind by remembering that the equation of the isothermal curve represents the law of Marriotte and the equation of the adiabatic curve represents the Exponential law of Marriotte.

Inasmuch as the power to compress a gas is measured practically by the indicator diagram, and this in turn is compared to the adiabatic curve which is theoretical curve of compression, and inasmuch as we depend upon the value of γ to construct this curve, it will be at once seen why we were so particular to dis-

cover the relation $\frac{C_p}{C_v} = \gamma$. Now if $P_0 V_0^\gamma = P V^\gamma$ and

from the simple gas equation $\frac{V^o P^o}{T^o} = \frac{V P}{T} = R$, by

combining these we have all the adiabatic relations between volume pressure and temperature as follows:

$$\begin{aligned}\frac{P}{P^o} &= \left(\frac{V^o}{V}\right)^{\gamma} = \left(\frac{T}{T^o}\right)^{\frac{\gamma}{\gamma-1}} \\ \frac{V}{V^o} &= \left(\frac{P^o}{P}\right)^{\frac{1}{\gamma}} = \left(\frac{T^o}{T}\right)^{\frac{1}{\gamma-1}} \\ \frac{T}{T^o} &= \left(\frac{V^o}{V}\right)^{\frac{\gamma-1}{\gamma}} = \left(\frac{P}{P^o}\right)^{\frac{\gamma-1}{\gamma}}\end{aligned}$$

It will always be necessary to use the above formulas in making calculations for pressures, temperatures, and volumes, or for power to compress any gas which varies far enough from the standard we have selected to make it necessary, but there is no doubt that for all practical purposes, at least for the present, Table 11, which is calculated for our standard gas, will give the proper values for rapidly and easily calculating any problems connected with compressing illuminating gas.

All reference to expansion is purposely omitted, because gas will probably never be used for expansion work in an engine as air is used.

Assuming that all may not be familiar with just how to arrive at the results as indicated in Table 11, let us

take a ratio of $\frac{P}{P^o} = 2$ corresponding to 14.7 pounds

gauge pressure and discover what are the values of $\frac{V}{V^o}$

and $\frac{T}{T^o}$. We have $\frac{V}{V^o} \left(\frac{P^o}{P}\right)^{\frac{1}{\gamma}}$ y we have already de-

cided from our standard gas to be 1.334.

$$\text{Therefore, } \frac{1}{\gamma} = \frac{1}{1.334} = .749 \quad \frac{V}{V^o} = \left(\frac{P^o}{P}\right)^{.749} \text{ or}$$

since

$$\frac{P^o}{P} = 1/2 \text{ or } .5 \text{ we have}$$

$$\frac{V}{V^0} = .5^{.749} \quad \text{or}$$

$$\text{Log. } \frac{V}{V^0} = \log .5 \times .749.$$

$\text{Log. } .5 = 1.6989 \times .749 = 1.77447 = \log. \frac{V}{V^0}$ giving value of $\frac{V}{V^0} = .5949$ and $\frac{V^0}{V}$ will be reciprocal of $\frac{V}{V^0}$ or 1.681.

To find the ratio of temperature for this same rate of compression, we have $\frac{T}{T^0} = \left(\frac{P}{P^0}\right)^{\frac{\gamma-1}{\gamma}} \quad \frac{\gamma-1}{\gamma} = .25.$

Hence:

$$\text{Log. } \frac{T}{T^0} = .25 \log. \frac{P}{P^0}$$

$$\text{Log. } \frac{P}{P^0} = .301 \times .25 = .07525 = \text{Log. } \frac{T}{T^0}$$

$$\frac{T}{T^0} = .1892.$$

$T = 520 \times 1.1892 = 618^\circ$ absolute or 158° Fah. if $T^0 = 60^\circ$ Fah. We have then

$$\frac{P}{P^0} = 2 \quad \frac{V^0}{V} = 1.681 \quad \frac{V}{V^0} = .5949.$$

$$\frac{T}{T^0} = 1.1892 \quad T = 158^\circ$$

Air under the same conditions gives

$$\frac{P}{P^0} = 2 \quad \frac{V^0}{V} = 1.6349 \quad \frac{V}{V^0} = .6117.$$

$$\frac{T}{T^0} = 1.2226 \quad T = 175^\circ \text{ Fah.}$$

These examples will serve to show how this Table 11 was calculated. A few examples will show its use.

Problem.—To find the final temperature due to adiabatic compression.

Opposite $\frac{P}{P^0}$ and under the headline $\frac{T}{T^0}$ will be found the ratio of absolute temperatures.

Example.—What is the final temperature due to 14.7 pounds gauge pressure at sea level and 60° Fah.?

TABLE II. ADIABATIC TABLE FOR GAS JULY 1905					
$\frac{p}{p_0}$	$\frac{T}{T_0}$		$\frac{T}{T_0} - 1$	$\frac{V}{V_0}$	
	NUMBER	DIFF.		NUMBER	DIFF.
1.2	1.0466	412	.0466	.8063	300
1.4	1.0878	369	.0878	.7763	733
1.6	1.1247	336	.1247	.7030	534
1.8	1.1583	309	.1583	.6436	488
2.	1.1892	287	.1892	.5948	410
2.2	1.2179	268	.2179	.5538	352
2.4	1.2447	251	.2447	.5186	301
2.6	1.2698	268	.2698	.4885	264
2.8	1.2966	195	.2966	.4621	233
3.	1.3161	214	.3161	.4388	207
3.2	1.3375	204	.3375	.4181	186
3.4	1.3579	195	.3579	.3995	169
3.6	1.3774	188	.3774	.3827	152
3.8	1.3962	180	.3962	.3675	139
4.	1.4142	173	.4142	.3536	126
4.2	1.4315	168	.4315	.3410	117
4.4	1.4483	162	.4483	.3299	108
4.6	1.4645	157	.4645	.3185	99
4.8	1.4802	152	.4802	.3086	94
5.	1.4954	697	.4954	.2992	883
6	1.5651	615	.5651	.2609	284
7	1.6266	552	.6266	.2325	222
8	1.6818	503	.6818	.2103	177
9	1.7321	462	.7321	.1926	147
10	1.7783		.7783	.1779	EARLY

$\frac{P}{P_0} = \frac{29.4}{14.7} = 2$. Then $\frac{T}{T_0} = 1.1892$, or $520 \times 1.1892 = 618^\circ$ abs. or 158° Fah.

If the initial temperature has been 100° then $560 \times 1.1892 = 666^\circ$ abs. or 206° Fah.

It is readily noted from this that the higher the initial temperature, the higher the final temperature, and it will also be noted that while there is a difference of 40° between the initial temperature, there is a difference of 48° between the final temperatures; a difference of 8° .

Inasmuch as the temperature developed during compression is at the expense of power, it is evident that it takes more power to compress the same weight of gas at 100° Fah. than at 60° Fah. to the same pressure, all other conditions being similar.

It is an axiom, therefore, that the cost of power for compressing gas will be the least when the initial temperature is the lowest, and it will be shown, later on, that cooling before compression will effect a considerable saving, if the gas to be compressed is drawn from the holder exposed to the sun, provided, of course, that cooling water may be had at a small expenditure of power.

Problem.—To find the volume immediately after compression.

Consult Table 11, and under the heading $\frac{V}{V_0}$ and opposite the pressure ratio $\frac{P}{P_0}$ the proper value will be found; and it must always be remembered that these values of temperature and volumes assume no radiation of heat whatever, for when the heat generated by compression has radiated the temperatures and volumes are as calculated isothermally.

Please note that $\frac{V}{V_0}$ is measured from the end of the stroke. The difference given in Table 11 will enable greater or lesser values of $\frac{P}{P_0}$ to be conveniently deter-

mined by simple rules of proportion.

From this table the adiabatic curve can be readily drawn.

Refer to Table 1, Figure 2.

Let $A B$ be the intake line and $C D$ the line of 0 pressure, these lines representing the piston stroke. Divide $A B$ into a decimal scale; beginning at B erect $F D$ at the end of the stroke and divide it into equal values of $B D$. $B D$ may be the value at sea level or at an altitude or it may be any intake pressure whatever; these rules will always apply. These values of $B D$ may be subdivided into five parts, where special accuracy is required, and their values will also be found in Table 11.

$D H$ representing a ratio of $\frac{P}{P_0} = 2$, the corresponding value of $\frac{V}{V_0}$ will be found in Table 11 to be .5948, and laying off the value the point S will be found.

Similarly at G representing $\frac{P}{P_0} = 3$ we find $\frac{V}{V_0} = .4388$, and laying this off we find that the point M .

And then F representing $\frac{P}{P_0} = 4$ has a value for $\frac{V}{V_0}$

of .3536, and we lay off this value and find point J . Joining the point $J M S A$ we develop the adiabatic curve, and the shape of this curve will depend upon

the length of the card, the value of $\frac{C_p}{C_v}$ or γ . The equation of the curve is $P V^\gamma = P' V'^\gamma$ or referring to the diagram.

$$M O \times (M G)^\gamma = J L \times (J F)^\gamma$$

Problem.—To determine the power to compress a gas adiabatically.

All that precedes this subject has been necessary to its proper understanding, and while possibly the various symbols are well remembered, it will probably

be better to group them together, so that they may be readily referred to.

P^0 is always the lesser absolute pressure, and consequently the intake pressure in compression. We shall take this as 14.7 at sea level, for the 4-inch water pressure of the gas will not fill the cylinder at any greater than atmospheric pressure. P is the final absolute pressure.

T^0 is the initial absolute pressure, and unless otherwise specified is taken at 60° Fah. or 520° absolute, that temperature being the probable temperature of the gas mains.

T is the final absolute temperature.

V^0 is the volume at P^0 .

V is the volume at P .

P' V' T' are intermediate pressures, temperatures, and volumes.

L is the work expressed in foot-pounds.

$H P$ is horsepower.

$M E P$ is mean effective pressure, which is always gauge pressure.

W is the weight of a unit volume or one cubic foot of our standard gas at 60° Fah. and at sea level, with an absolute pressure of 14.7 lbs. per square inch, or 2116.8 pounds per square foot, and equals .03063 pounds avoirdupois.

J is Joules' equivalent taken at 772 foot-pounds.

C^p is the specific heat at constant pressure = .6884.

C^v is the specific heat at constant volume = .5159.

$$\gamma \text{ is } \frac{C^p}{C^v} = 1.334.$$

$$\frac{\gamma}{\gamma-1} = 4. \quad \frac{\gamma-1}{\gamma} = .25 \quad \frac{1}{\gamma} = .75$$

$$J C^p = 772 \times .6884 = 531.45 \text{ foot-pounds.}$$

This value is Joules' equivalent for 1 lb. of gas at constant pressure.

$$J W C^p = 531.45 \times .03063 = 16.28 \text{ foot-pounds} = \text{Joules' equivalent for 1 cubic foot of gas.}$$

$$J W C^p T^0 = 16.28 \times 520 = 8465 \text{ foot-pounds.}$$



$$\frac{y}{y-1} \times P^0 V^0 = 4 \times 144 \times 1 \times 14.7 = 8465$$

foot-pounds = the intrinsic energy of 1 cubic foot of gas at 60° Fah. and atmospheric pressure at sea level; or to reduce those values of foot-pounds to horsepower, we have

$$J W C^p T^0 = \frac{8465}{33000} = .2564 H P$$

$$\frac{y}{y-1} P^0 V^0 = \frac{8465}{33000} = .2564 H P$$

All of these foregoing quantities are constants to be used in determining the power to compress gas, and as we have said before, are all based on a quantity of 1 cubic foot of our standard gas at sea level and 60° Fah.

We mentioned at the beginning of this paper that the power to compress any gas adiabatically might be expressed by the general formula

$$L = J W C^p (T - T^0), \text{ or to put it in another form,}$$

$$L = J W C^p T^0 \left(\frac{T}{T^0} - 1 \right)$$

You now at once recognize the prefix $J W C^p T^0$ as the one for which we have found a value of 8465 foot-pounds. Therefore, for our standard gas we have

$$L = 8465 \left(\frac{T}{T^0} - 1 \right) \text{ which is a practical formula.}$$

You also recognize that $\frac{T}{T^0}$ is all you need solve, and these values are all given in Table 11 for the various values of $\frac{P}{P^0}$. We can now understand our first problem.

How many foot-pounds are necessary to compress 1 cubic foot of our standard gas to 14.7 pounds gauge pressure?

$$\frac{P}{P^0} = \frac{294}{14.7} = 2. \text{ Consulting Table 11 we find}$$

$$\frac{T}{T^0} - 1 = .1892 \text{ and } 8465 \times .1892 = 1601.57 \text{ foot-}$$

pounds, and the same method may be applied for all pressures.

If we use the value of $J W C^p T^0$ in horsepower, we have $H P = .2564 \left(\frac{T}{T^0} - 1 \right)$ a perfectly practical formula for 1 cubic foot of our standard gas at 60° Fah. and at sea level.

Our previous example would then be rendered:

$L = .2564 \times .1892 = .0485$ horsepower for 1 cubic foot compressed to 14.7 lbs. gauge. At 80 lbs. gauge pressure.

$$\frac{P}{P^0} = 6.442 \text{ and } \frac{T}{T^0} = 1.593.$$

$H P = .2564 \times .593 = .1520$ horsepower per cubic foot, or 15.20 H P per 100.

MEAN EFFECTIVE PRESSURES.

It will be found that inasmuch as we learn from an indicator what our gas compressor is doing, and inasmuch as $M E P$ pressures are quickly determined by a planimeter from an indicator card, that to become familiar with what the $M E P$ should be and compare it with what the compressor is doing is the best practical way of dealing with the subject.

We found that

$$L = J W C^p T^0 \left(\frac{T}{T^0} - 1 \right) \text{ and that}$$

$$J W C^p T^0 = \frac{\gamma}{\gamma-1} P^0 V^0, \text{ therefore}$$

$$L = \frac{\gamma}{\gamma-1} P^0 V^0 \left(\frac{T}{T^0} - 1 \right)$$

L must always equal $M E P \times V^0$, we have:

$$M E P \times V^0 = \frac{\gamma}{\gamma-1} P^0 V^0 \left(\frac{T}{T^0} - 1 \right) \text{ or}$$

$$M E P = \frac{\gamma}{\gamma-1} P^0 \left(\frac{T}{T^0} - 1 \right) \text{ and since}$$

$$\frac{\gamma}{\gamma-1} = 4, \text{ we have for our standard gas}$$

$$M E P = 4 P^0 \left(\frac{T}{T^0} - 1 \right)$$

Take 80 lbs. gauge pressure.

$\frac{T}{T^0} - 1 = .593$ as determined in a former example by Table 11.

$$P^0 = 14.7.$$

$$M E P = 4 \times .593 \times 14.7 = 34.86 \text{ lbs. per sq. in.}$$

For our standard gas for one cubic foot at sea level

$$M E P = 4 \times 14.7 \left(\frac{T}{T^0} - 1 \right) = 58.8 \left(\frac{T}{T^0} - 1 \right)$$

$$H P = \frac{144 \times 1 \times M E P}{33000} = .00436 \times M E P, \text{ or}$$

$$H P = .00436 \times 58.8 \left(\frac{T}{T^0} - 1 \right) = .2564 \left(\frac{T}{T^0} - 1 \right)$$

the same result we obtained in a former example.

INITIAL TEMPERATURES.

The general expression for the work of compression being

$$L = \frac{\gamma}{\gamma-1} P^0 V^0 \left(\frac{T}{T^0} - 1 \right)$$

it is evident that so long as $\frac{T}{T^0}$ remains constant, the power to compress one cubic foot of the same gas is constant, but inasmuch as the temperature of the mains is practically constant and about 60° Fah., if our initial temperature from the holder should happen for any reason to be 100° Fah., as it was entering the compressor, it is evident that the compressor must make an extra number of revolutions to deliver a fixed quantity into the mains at 60° Fah. than it would if the mains were the same temperature as the gas in the holder, and the ratio would be as the absolute temperatures or $\frac{560}{520}$, or 8 per cent additional. In a plant where 250 horsepower is used in compressing the gas, this would mean a saving of 20 horsepower. By passing the gas through a cooler before it reached the compressor would correct the loss. Inasmuch as little water is required for this, and the water is in no wise impaired for other purposes, that this cooling could always be done. *Vice versa*, if the temperature of the holder was

lower than the mains, as in winter, there would be a corresponding gain and some of the otherwise lost heat of compression would be utilized in expanding the gas to a temperature corresponding to the main. In the long run, the gain might balance the loss, if no cooling were done, but it seems a business proposition to save where possible, especially where it costs little or nothing.

TWO STAGE COMPRESSION.

If we consider the general equation for the work performed in compressing any gas, adiabatically

$$L = J W C^p (T - T^o)$$

we note that the only variable is T , the final temperature, if our initial temperature remains the same. In other words, the difference between the initial and final temperature determines always the power expended in a compressor, just as it does the power given out by any heat engine. It is evident, then, that the lower we keep the final temperature the less power it takes. Water-jacketing the cylinders accomplishes but little, probably from 3 to 5 per cent, for the reason that gases being such poor heat conductors that, while they are rapidly drawn in and pushed out of the compressing cylinder, there is not time for the heat to radiate through the cylinder walls, and only the portion immediately in contact with the cool cylinder walls suffers any reduction of temperature. The water jacket keeps the cylinder walls cool so that lubrication is effective and is valuable for that reason principally.

Practically speaking, the compression is adiabatic, or even greater because the pressure in the cylinder is always greater than the receiver on account of the work expended in forcing the gas through the valve openings, and this extra heat generated overruns the adiabatic temperature corresponding to the receiver pressure.

The water jacket being ineffective, the device of stage compression was inaugurated, where, after the gas was compressed to a portion of the final pressure

in a cylinder, it was discharged into an intercooler, its temperature reduced to the initial and then compressed by a smaller cylinder to the final pressure. The work was found to be a minimum when the final temperature of each stage was the same.

If we represent the initial pressure by P^0 and the final by P' , and volumes and temperatures similarly, we shall have, using our general formula for work expended,

$$L = \frac{\gamma}{\gamma-1} P^0 V^0 \left(\frac{T}{T^0} - 1 \right) \text{ for first stage and}$$

$$L' = \frac{\gamma}{\gamma-1} P V \left(\frac{T'}{T} - 1 \right) \text{ for second stage.}$$

We know that before compression $P^0 V^0$ must equal $P V$, consequently if L is desired to equal L' , we must have

$$\left(\frac{T}{T^0} - 1 \right) = \left(\frac{T'}{T} - 1 \right) \text{ or}$$

$$\frac{T}{T^0} = \frac{T'}{T}$$

$$\frac{T}{T^0} = \left(\frac{P}{P^0} \right)^{\frac{\gamma-1}{\gamma}}$$

$$\frac{T'}{T} = \left(\frac{P'}{P} \right)^{\frac{\gamma-1}{\gamma}}, \text{ or reducing}$$

$$\frac{P}{P^0} = \frac{P'}{P} \text{ or } P^2 = P^0 P' \text{ or } P = \sqrt{P^0 P'}$$

In other words, to make the work in two stages equal, and to have the work a minimum, P , the intermediate pressure, must be a mean proportional between the initial and the final pressure, the volumes and the piston areas must follow the same law, since we naturally make the strokes alike.

For an example, let us take 80 pounds final gauge pressure:

$P = \sqrt{P^0 P'} \text{ or } \sqrt{14.7 \times 94.7} = 37.31 \text{ absolute}$
or 22.61 gauge pressure. This makes

$$\frac{P}{P^0} = \frac{37.31}{14.7} = 2.54, \text{ and}$$

$$\frac{P'}{P} = \frac{94.7}{37.31} = 2.54$$

and inasmuch as these pressure ratios are the same, the work expended on each stage will be the same and the piston ratio will be 2.54 also.

We found for the standard gas that

$$H P = .2564 \left(\frac{T}{T^0} - 1 \right)$$

Referring to Table 11, we find when

$$\frac{P}{P^0} = 2.54, \text{ that } \frac{T}{T^0} = 1.2624.$$

Then $H P = .2564 \times .2624 = .06727$ for each stage and for both stages, $2 \times .06727 = .13454 H P$.

It will be remembered that we calculated the single stage $H P$ for 80 lbs. in a former example as .1520. We have then 13.45 $H P$ per 100 cu. ft. two stage against 15.20 $H P$ single stage, a saving of 13 per cent in power.

If the maintaining of a low temperature is any advantage in gas compression, we have a temperature of 366° Fah. in the single stage compression against 195° Fah. in the two stage, a remarkable difference. Suppose now that we have a cylinder having an area of 100 sq. inches, when we compress to 80 lbs. the maximum strain is 8000 lbs., if the compressor is single stage and 4522 lbs. if the compressor is a tandem two stage, a remarkable difference, tending to show that we can build the two stage compressor very much lighter for the same work.

Another point in favor of the two stage compressor, it has a greater volumetric efficiency. A piston never delivers from a cylinder an amount of gas equal to its displacement, because clearance spaces are filled with gas at the discharge pressure, which expands in the return stroke of the piston and occupies more or less space according to the ratio of compression and the amount of clearance. The greater the temperature of compression, the hotter the piston and heads and

TABLE 12		LOSS OF PRESSURE CAUSED BY FRICTION OF COMPRESSED GAS IN PIPES															JULY 1905		E. A. RIX		
EQUIVALENT VOLUME IN CU. FT. OF FREE AIR PER MIN. PASSING THROUGH PIPE.		SIZE OF PIPE															DIFFERENCE IN SQUARES OF INITIAL AND FINAL ABSOLUTE PRESSURE, PER 100 FEET OF PIPE				
		1	1 1/4	1 1/2	2	2 1/2	3	3 1/2	4	5	6	7	8	9	10	12	14	16	18	20	
$P_1^2 - P_2^2$																					
50		30	29.32	12	2.69																
75		201	59.10	27.32	6.30																
100		360	109.2	47.4	11.28	3.69															
150		810	265.8	106.9	25.32	7.23	3.30														
200		1440	452.6	186.6	45.4	14.76	5.94	1.62	1.44												
250		2250	756	286.4	70.2	23.70	9.24	4.26	2.76												
300		3240	1082	426.6	100.8	30.24	13.32	6.78	3.78												
400		5760	1936	757.6	160	50.56	23.70	10.52	5.44	1.66											
500		8000	2852	1086.6	236	72	32.4	17.10	8.76	2.68											
600		10800	4260	1707	405	132.6	52.4	24.6	12.6	4.14											
800		17640	8042	720	236.4	234.4	92.4	43.8	22.8	7.38	2.36										
1000		25200	11760	1128	469	449.2	63.4	85.04	11.52	4.62	1.63										
1500		45400	20650	2532	849	933	153	79.2	25.32	10.44	4.90										
2000		72000	38340	4500	1476	1594	273	140.4	46.2	18.54	11.52	4.30									
3000		126000	67600	8214	2732	3214	432	245.4	80.32	40.32	19.26	7.30	5.49								
4000		180000	9588	1082	3708	1710	576	325.4	103.6	56.22	26.43	14.4	9.42	3.72	5.76						
5000		252000	13360	13360	2000	2000	700	400	160	160	160	160	160	160	160	3.62					
6000		324000	16600	16600	2520	2520	864	200	200	200	200	200	200	200	200	4.26					
8000		576000	24400	24400	3960	3960	3240	280	280	280	280	280	280	280	280	5.42					
10000		800000	33000	33000	5370	5370	4780	360	360	360	360	360	360	360	360	6.72	3.42				
15000		1260000	46260	46260	7808	7808	6760	504	504	504	504	504	504	504	504	8.1	32.46	15.0	7.74	4.26	
20000		1764000	67600	67600	11040	11040	9760	720	720	720	720	720	720	720	720	10.44	57.30	26.7	13.3	7.62	
25000		2250000	92400	92400	14100	14100	12300	924	924	924	924	924	924	924	924	12.5	90	45	27.6	11.88	
30000		2808000	120400	120400	19000	19000	16600	1204	1204	1204	1204	1204	1204	1204	1204	14.86	130.2	60	30.9	17.1	
35000		3384000	150400	150400	24000	24000	20800	1504	1504	1504	1504	1504	1504	1504	1504	17.1	177	82.2	47.0	23.4	
40000		3960000	180400	180400	29000	29000	25200	1804	1804	1804	1804	1804	1804	1804	1804	19.26	201.6	102.6	54.9	30.3	
50000		5760000	244000	244000	34000	34000	34000	2440	2440	2440	2440	2440	2440	2440	2440	23.70	276	132.6	77.7	42.4	
60000		7200000	324000	324000	46000	46000	46000	3240	3240	3240	3240	3240	3240	3240	3240	26.43	303	152.4	81.6	42.9	
80000		10800000	462600	462600	61260	61260	61260	4626	4626	4626	4626	4626	4626	4626	4626	52.4	352	176.4	92.9	52.4	
100000		12600000	612600	612600	81260	81260	81260	6126	6126	6126	6126	6126	6126	6126	6126	61.08	360	180	90	45	
150000		18000000	812600	812600	106260	106260	106260	8126	8126	8126	8126	8126	8126	8126	8126	103.8	429	214.5	107.2	53.5	
200000		25200000	1062600	1062600	136260	136260	136260	10626	10626	10626	10626	10626	10626	10626	10626	126.8	480	240	120	60	
300000		37600000	1362600	1362600	180260	180260	180260	13626	13626	13626	13626	13626	13626	13626	13626	159.6	540	270	135	67.5	
400000		50000000	1802600	1802600	240260	240260	240260	18026	18026	18026	18026	18026	18026	18026	18026	192.6	600	300	150	75	
500000		62400000	2402600	2402600	300260	300260	300260	24026	24026	24026	24026	24026	24026	24026	24026	225.6	660	330	165	82.5	
600000		72000000	3002600	3002600	360260	360260	360260	30026	30026	30026	30026	30026	30026	30026	30026	259.2	720	360	180	90	
800000		100800000	4002600	4002600	480260	480260	480260	40026	40026	40026	40026	40026	40026	40026	40026	345.6	840	420	210	105	
1000000		126000000	5002600	5002600	600260	600260	600260	50026	50026	50026	50026	50026	50026	50026	50026	429.6	960	480	240	120	
1500000		180000000	6760000	6760000	812600	812600	812600	67600	67600	67600	67600	67600	67600	67600	67600	573.6	1260	630	315	157.5	
2000000		252000000	9240000	9240000	1104000	1104000	1104000	92400	92400	92400	92400	92400	92400	92400	92400	727.2	1440	720	360	180	
3000000		376000000	12040000	12040000	1410000	1410000	1410000	120400	120400	120400	120400	120400	120400	120400	120400	972	1800	900	450	225	
4000000		500000000	15040000	15040000	1800000	1800000	1800000	150400	150400	150400	150400	150400	150400	150400	150400	1224	2160	1080	540	270	
5000000		624000000	18040000	18040000	2160000	2160000	2160000	180400	180400	180400	180400	180400	180400	180400	180400	1483.2	2520	1260	630	315	
6000000		720000000	21600000	21600000	2520000	2520000	2520000	216000	216000	216000	216000	216000	216000	216000	216000	1737.6	2880	1440	720	360	
8000000		1008000000	28026000	28026000	3360000	3360000	3360000	2802600	2802600	2802600	2802600	2802600	2802600	2802600	2802600	2294.4	3600	1800	900	450	
10000000		1260000000	33600000	33600000	4002600	4002600	4002600	3360000	3360000	3360000	3360000	3360000	3360000	3360000	3360000	2851.2	4320	2160	1080	540	
15000000		1800000000	45026000	45026000	5402600	5402600	5402600	4502600	4502600	4502600	4502600	4502600	4502600	4502600	4502600	3782.4	5760	2880	1440	720	
20000000		2520000000	60026000	60026000	7202600	7202600	7202600	6002600	6002600	6002600	6002600	6002600	6002600	6002600	6002600	4972.8	7680	3840	1920	960	
30000000		3760000000	81260000	81260000	9722600	9722600	9722600	8126000	8126000	8126000	8126000	8126000	8126000	8126000	8126000	6628.8	10080	5040	2520	1260	
40000000		5000000000	106260000	106260000	12602600	12602600	12602600	10626000	10626000	10626000	10626000	10626000	10626000	10626000	10626000	8582.4	13440	6720	3360	1680	
50000000		6240000000	136260000	136260000	1602600	1602600	1602600	13626000	13626000	13626000	13626000	13626000	13626000	13626000	13626000	11136	17280	8640	4320	2160	
60000000		7200000000	166000000	166000000	19602600	19602600	19602600	16600000	16600000	16600000	16600000	16600000	16600000	16600000	16600000	13740	21600	10800	5400	2700	
80000000		10080000000	216000000	216000000	25202600	25202600	25202600	21600000	21600000	21600000	21600000	21600000	21600000	21600000	21600000	18288	28800	14400	7200	3600	
100000000		12600000000	280260000	280260000	33602600	33602600	33602600	28026000	28026000	28026000	28026000	28026000	28026000	28026000	28026000	23832	38400	19200	9600	4800	
150000000		18000000000	360260000	360260000	43202600	43202600	43202600	36026000	36026000	36026000	36026000	36026000	36026000	36026000	36026000	31776	51840	25920	12960	6480	
200000000		25200000000	480260000	480260000	57602600	57602600	57602600	48026000	48026000	48026000	48026000	48026000	48026000	48026000	48026000	42336	69120	34560	17280	8640	
300000000		37600000000	636000000	636000000	76802600	76802600	76802600	63600000	63600000	63600000	63600000	63600000	63600000	63600000	63600000	56448	92160	46080	23040	11520	
400000000		50000000000	812600000	812600000	97226000	97226000	97226000	81260000	81260000	81260000	81260000	81260000	81260000	81260000	81260000	74256	122880	61440	30720	15360	
500000000		62400000000	1062600000	1062600000	126026000	126026000	126026000	106260000	106260000	106260000	106260000	106260000	106260000	106260000	106260000	97296	161280	80640	40320	20160	
600000000		72000000000	1362600000	1362600000	16026000	16026000	16026000	136260000	136260000	136260000	136260000	136260000	136260000	136260000	136260000	122304	204480	102240	51120	25560	
800000000		100800000000	1802600000	1802600000	216026000	216026000	216026000	180260000	180260000	180260000	1802										

PRESSURES AND SQUARES OF PRESSURES.										JULY 1905		
TABLE 13												
GAUGE PRESSURE	ABSOLUTE PRESSURE	Sq. of Absolute Pressure	GAUGE PRESSURE	ABSOLUTE PRESSURE	Sq. of Absolute Pressure	GAUGE PRESSURE	ABSOLUTE PRESSURE	Sq. of Absolute Pressure	GAUGE PRESSURE	ABSOLUTE PRESSURE	Sq. of Absolute Pressure	Sq. of Absolute Pressure
0	14.7	216										
2	16.7	279										
4	18.7	350										
6	20.7	428										
8	22.7	515										
10	24.7	610	56	70.7	4998	105	119.7	14328	240	254.7	64855	
12	26.7	713	58	72.7	5285	110	124.7	15538	250	264.7	70055	
14	28.7	824	60	74.7	5580	115	129.7	16822	260	274.7	75455	
16	30.7	942	62	76.7	5883	120	134.7	18184	270	284.7	81055	
18	32.7	1069	64	78.7	6194	125	139.7	19624	280	294.7	86855	
20	34.7	1204	66	80.7	6512	130	144.7	21142	290	304.7	92840	
22	36.7	1347	68	82.7	6838	135	149.7	22738	300	314.7	99020	
24	38.7	1498	70	84.7	7174	140	154.7	24412	315	329.7	108000	
26	40.7	1656	72	86.7	7517	145	159.7	26164	330	344.7	118940	
28	42.7	1823	74	88.7	7869	150	164.7	27994	345	359.7	130850	
30	44.7	1998	76	90.7	8226	155	169.7	29902	400	414.7	191950	
32	46.7	2180	78	92.7	8593	160	174.7	31888	425	439.7	193900	
34	48.7	2372	80	94.7	8964	165	179.7	33952	450	464.7	215920	
36	50.7	2570	82	96.7	9347	170	184.7	36094	475	489.7	237940	
38	52.7	2777	84	98.7	9742	175	189.7	38314	500	514.7	264960	
40	54.7	2993	86	100.7	10140	180	194.7	40612	550	564.7	318900	
42	56.7	3215	88	102.7	10542	185	199.7	43088	600	614.7	378900	
44	58.7	3446	90	104.7	10947	190	204.7	45642	650	664.7	444900	
46	60.7	3684	92	106.7	11355	195	209.7	48274	700	714.7	510900	
48	62.7	3931	94	108.7	11766	200	214.7	46090	750	764.7	579900	
50	64.7	4196	96	110.7	12184	210	224.7	50490	800	814.7	663250	
52	66.7	4449	98	112.7	12607	215	229.7	53060	900	914.7	836700	
54	68.7	4720	100	114.7	13038	220	234.7	55840	1000	1014.7	1029650	

valves get, and the less weight of gas enters the cylinder on account of the clearance expansion. There are other losses which need not be mentioned here, but these two are sufficient to make the volumetric efficiency of single stage compressors at 80 lbs. average about 75 per cent.

It will be readily seen that the initial cylinder of a two-stage machine at 80 lbs. will have its clearance losses divided by 2.54, because that will be the relative ratio of pressures and the temperature losses in proportion to

$\frac{195}{366}$ because that is the absolute temperature ratio.

These combined will make the average two-stage compressor good for 90 per cent volumetric efficiency—in other words, 15 per cent better than a single stage. One can, therefore, afford to pay at least 15 per cent more for a two-stage machine than for a single-stage machine, the intake cylinders being the same size, and this extra 15 per cent will nearly, or sometimes quite, pay for the difference in price.

It is evident from the calculations we have made that the efficiency of a two-stage machine over the single stage increases directly as the pressure ratios increase, and inasmuch as altitude increases pressure ratios, it is evident that the higher the altitude the more urgent becomes the necessity for using the two-stage machines, and at altitudes above 3000 feet it is practically imperative.

Theoretically, an infinite number of stages would give isothermal compression, but practically the losses involved in driving the gas through too many cylinders and valves would offset this gain, and we can consider that two stages will probably be the limit for all ordinary purposes.

ALTITUDE COMPRESSION.

We found that it took the same power to compress one cubic foot of gas at any temperature to the same final pressure, provided the initial pressures were the

same, and it naturally followed that it took more power to compress the same weight at higher temperatures, because there would be a larger volume and the piston would have to make more strokes.

Altitude acts like an increase of temperature in lessening the density of a gas, but it introduces another element, viz., change of initial pressure, so that as we reach higher altitudes the pressure ratio is constantly increasing, which means, of course, that the temperature of compression is increasing and more work per unit of gas weight is being done, but the weight is constantly decreasing as we ascend, and the combination of these results is that while it takes less work to discharge any given cylinder full of gas at an altitude, the increased number of strokes necessary to compress a weight equivalent to a given sea level volume is considerably greater.

Table 17.

July, 1905

Altitude.	$\frac{P}{P^0}$	$\frac{Y}{Y^0-1}$	P^0	V^0	$\frac{T}{T^0-1}$	Foot - pounds to compress one cubic foot	Equivalent to produce same compressed gas at altitude	Initial pressure.....	Gauge press.....
Sea level..	6.44	4	14.7	1×144	.593	5020	5020	14.7	80
10,000 ft..	9.47	4	10.	1×144	.753	4337	6375	10.	80

$T = 390^\circ$ Fah. at sea level.

$T = 450^\circ$ Fah. at 10,000 feet altitude.

Table 17, shows a comparison between compressing gas at a sea level and at 10,000 feet altitude single stage compression. The columns 3 to 6, inclusive, comprise the components of the general formula for compressing gas, and it is interesting to note the variable quantities. It will be seen that while one cubic foot of the altitude gas requires less power, the increased volume necessary to produce a common result makes it require 25 per cent more power.

It will also be noted that the final temperature is

quite high in comparison to sea level compression, which speaks loudly for two-stage compression.

FLOW OF GAS IN PIPES.

After reading the report of the committee on "The Flow of Gas in Pipes," for the Ohio Gas Light Association, as published in the *American Gas Light Journal*, April 24, 1905, the general impression would be that the formulas were not sufficiently reliable to be of great service, because there was a variation in the results of a given problem of from 1 to 200 per cent. It would seem, however, that six formulas out of the nine do not vary 15 per cent, and the three most frequently used do not vary $2\frac{1}{2}$ per cent.

If we should accept the largest of these three, called the Pittsburg formula, we would probably not be far wrong, and particularly as the results do not differ greatly from those obtained by using Cox's computer, and I am informed by those who have used the computer that it is perfectly safe.

Again, the variation in the areas of those pipe sizes most likely to be used are much more considerable than the variations of any of the six formulas above referred to. Thus, taking the commercial sizes of pipe from 1" to 6", the average variation between the areas of each size is 35 per cent.

If we therefore make a practice of using the pipe that is the nearest size larger than our calculations, we shall have an ample safety factor.

For air we have been using a formula developed by Mr. J. E. Johnson, Jr., and published in the *American Machinist* July 27, 1899.

$$P'^2 - P''^2 = \frac{.0006 Q^2 L}{d^5}$$

P' = absolute initial pressure.

P'' = absolute final pressure.

Q = free air equivalent in cubic feet per minute.

L = length of pipe in feet.

d = diameter on pipe in inches.

Practical results from this formula show that it is a

little too liberal, and that $P'^2 - P''^2 = \frac{.00005 Q^2 L}{d^5}$ would be nearer the results.

The Pittsburg gas formula reduces to the same value when the proper substitutes are made for the relative specific gravities of gas and air.

Inasmuch as the specific gravity of gas is always referred to air as 1, it seems right that our gas formula should refer to air and a co-efficient used for each gas.

The velocity of different gases through a pipe varies inversely as the square root of their densities, or what amounts to the same thing, their specific gravities or weights compared to air, then the velocities will vary as

$$\sqrt{\frac{G}{I}} \text{ or } \sqrt{G}$$

Where G is the specific gravity of gas.

Prefixing this to our original equation, we have in general, for any gas,

$$P'^2 - P''^2 = .0005 \sqrt{G} \times \frac{Q^2 L}{d^5}$$

Or

$$Q = \sqrt[4]{\frac{44.72}{G}} \sqrt{\frac{P'^2 - P''^2 \times d^5}{L}}$$

Inasmuch as certainly for some considerable time crude oil gas will be most extensively used by members of this Association, let us substitute in the above formula the value of the largest probable specific gravity, viz., .49, and we have $\sqrt[4]{.49} = .7$ and

$$P'^2 - P''^2 = .00035 \frac{Q^2 L}{d^5} \quad (A)$$


Or

$$Q = 53.45 \sqrt{\frac{P'^2 - P''^2 \times d^5}{L}}$$

Q is in cubic feet per minute rather than per hour, because all compressors are so rated.

Table 12 gives values of $P'^2 - P''^2$ for 100 feet of various sized pipes and quantities will be found convenient for figuring gas flows in pipes. The values are calculated from equation (A).


TABLE 14 INDICATOR CARDS FROM GAS COMPRESSORS. JULY 1905

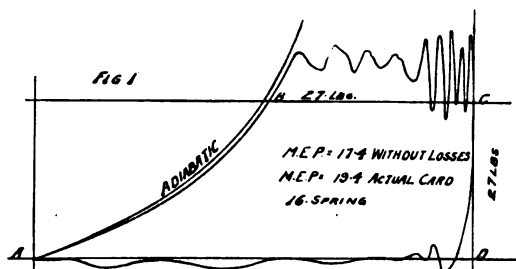

$$M.E.P. = \frac{Y}{Y-1} p_0 \left(\frac{T}{T_0} - 1 \right)$$

$$= 3.95 \times 14.7 \times 3028 = 77.58 \text{ ADAMANTIC}$$


CRUDE OIL GAS FRESNO CAL.

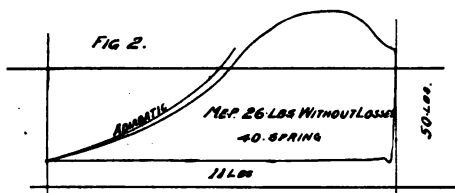

$$M.E.P. = \frac{Y}{Y-1} p_0 \left(\frac{T}{T_0} - 1 \right)$$

$$= 4.76 \times 25.7 \times 219 = 26.30 \text{ ADAMANTIC}$$

NATURAL GAS ANDERSON IND

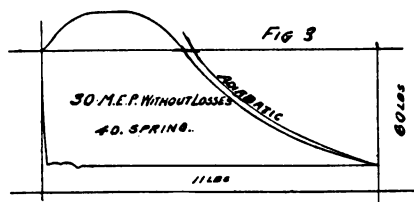

$$M.E.P. = \frac{Y}{Y-1} p_0 \left(\frac{T}{T_0} - 1 \right)$$

$$= 4.61 \times 25.7 \times 257 = 30.85 \text{ ADAMANTIC}$$

NATURAL GAS ANDERSON IND

E. A. R. I. X.

Example I—

1000 cubic feet per minute of gas at 90 pounds gauge pressure is discharging into a 4" pipe 26,000 feet long. Required the terminal pressure.

$$P'^2 = 10962. \text{ (Table 13)}$$

$$P'^2 - P''^2 = 35.04 \text{ for 100 feet. (Table 12)}$$

Multiplying by 260 for 26,000 feet

$$P'^2 - P''^2 = 9110.$$

$$P''^2 = P'^2 - (P'^2 - P''^2) = 10962 - 9110 = 1852.$$

$$P''^2 = 1852. \quad P'' = 28 \text{ pounds.}$$

Example II—

A pipe line 3" diameter and 11,000 feet long. Required to find the quantity of gas that will be delivered at a terminal pressure of 1 pound, the initial pressure being 40 pounds.

$$P'^2 = 2992. \text{ (Table 13)}$$

$$P''^2 = 279 \text{ (Table 13)}$$

$P'^2 - P''^2 = 2713$ for 11,000 feet of pipe or 24.6 for 100 feet.

Referring to Table 12, we find value of 23.70 for 420 cubic feet per minute.

Example III—

A pipe line is 11,000 feet long and 4" diameter. The equivalent of 1000 cubic feet is wanted at the end of the line at 10 pounds pressure. What must be the initial pressure?

$P'^2 - P''^2 = 35.04$ for 100 feet (Table 12). Multiplying by 110 we have

$$P'^2 - P''^2 = 3854 \text{ for 11,000 feet.}$$

$$P''^2 = 610. \text{ (Table 13)}$$

$$P'^2 = P''^2 + (P'^2 - P''^2) = 3854 + 610 = 4464.$$

$$P' = \sqrt{4464}.$$

Referring to Table 13 we find 52 pounds gauge pressure to be the initial pressure.

Example IV—

The equivalent of 200 cubic feet per minute is to be put through a pipe 53,000 feet long. The initial pres-

sure is 20 pounds. The final pressure must be 6 pounds. What will be the size of the pipe?

$$P'^2 = 1204. \quad (\text{Table 13})$$

$$P''^2 = 428. \quad (\text{Table 13})$$

$P'^2 - P''^2 = 776$ for 53,000 feet of pipe or 1.464 per 100 feet. Referring to Table 12, we find 4" to be the proper size.

SOME CORROBORATIONS.

Table 15 gives at Figure 1 a card from the gas cylinder of a compressor at Fresno, compressing crude oil gas at a pressure of 27 pounds gauge.

If we draw the line of 27 pounds' pressure and take the $M E P$ with a planimeter, following the curve $A B$ and the straight lines $B C - C D$ and $A B$, we shall have the $M E P$ of a perfect card following the actual compression line. This $M E P$ we find to be 17.4 pounds, using the γ which we found for Fresno gas, the adiabatic $M E P$ for 27 pounds = 17.58, making a good check on our values.

Figures 2 and 3 are from a compressor pumping natural gas at Anderson, Indiana, each having an intake pressure of 11 pounds—drawing lines of 50 pounds' pressure at Figure 2 and 60 pounds at Figure 3, and taking the $M E P$ in the same way that we did in Figure 1, we find that the $M E P$ for Figure 2 is 26 pounds, and for Figure 3, 30 pounds.

Using the value of γ which we developed for natural gas and calculating the adiabatic $M E P$, we find they are 26.30 and 30.85 pounds, respectively, a very satisfactory check, and from these we may fairly conclude that our theories and formulas are reasonable.

It will be noted that the line of the compressor curve is very near the adiabatic, even though the compressors were making but 60 to 70 revolutions per minute. An air card would show at least double the separating space.

This would appear to show that the jackets were doing but very little good, and possibly because illuminating gas may be a much poorer conductor of heat than air.

The line of compression comes so near the adiabatic that we may well call the compression adiabatic for safety in our calculations—but while the $M E P$ adiabatic for any pressure represents the greatest possible power required to compress a gas, a still greater power must be applied—for example look at the Fresno card, Figure 1, Table 14—the area above the 27-pounds line represents work done in overcoming the inertia of the outlet valves in pushing the gas into the main, and this area will be greater or less depending upon the valve area and the size of the discharge openings and the piston speed. It will also be noted that there is an area representing suction work below the line $A D$, notwithstanding that the gas has a 4" water pressure at holder. This probably indicates that the pipes from the holder to the compressor are too small.

Now, if we run a planimeter over the actual area of the card, we find that the real $M E P$ is 19.4, or about 10 per cent greater than the adiabatic, and this agrees quite well with ordinary air practice, where a safe rule for single-stage work is to take the $M E P$ at 10 per cent above the adiabatic and the two-stage $M E P$ the same as the adiabatic. Slow speed, well-constructed compressors will do somewhat better, but it is well to calculate on the average type.

Now, for brake power to be delivered to a gas compressor, we have to allow a mechanical efficiency of the compressor at not to exceed 85 per cent, so that this 15 per cent loss combined with the 10 per cent loss in the cylinder points to the fact that we should add 26½ per cent to the adiabatic $H P$ for the brake power required.

The steam-engine cards on the Fresno compressor show an $M E P$ reduced to the size of the air cylinder of 20.75 pounds, or 20 per cent higher than the adiabatic air $M E P$, but this compressor had a Meyer cut-off, which helped its economy considerably.

Referring to Table 9, column 17, gives the formula for computing the power to compress one cubic foot of the gas at sea level and 60° Fah. If the calculation

be made it will be noted that it takes practically the same power to compress one cubic foot of any of these gases, consequently Table 19 may be used generally.

In conclusion your attention is called to Table 19, which contains in convenient form the results which we have obtained, and which it is hoped you will find very helpful in considering thermodynamic questions regarding the standard illuminating gas made from crude oil.

SOME ECONOMICS IN HIGH PRESSURE GAS TRANSMISSION.

By EDWARD A. RIX.

Mr. President and Fellow Members of the Pacific Coast Gas Association.

Last year I had the pleasure of presenting for your consideration a paper entitled "The Compression and Transmission of Illuminating Gas," in which the general theory of the subject was discussed, and methods shown for calculating the specific heats of various gas mixtures, the heat developed by compression, and the power required. Also various losses in pressure and power in pushing gas through pipes, and some coefficients for all this data, so that one could approximate, with some degree of certainty, the various elements of a practical plant. The length of the paper did not permit of bringing it to such a closing that those not caring for the theoretical part could readily solve some everyday problems pertaining to a high-pressure gas transmission. It is, therefore, the intent of this paper to briefly supply this deficiency, and at the same time to introduce the element of cost of compressing gas and a method for determining the proper size of pipes so that the gas engineer may be able to readily and easily arrive at the essential elements in his problem.

Curve sheet No. 20 has been constructed for this purpose and conditions as general as possible have been assumed, and in order that it may be easy for anyone to construct a similar curve sheet for other conditions, the method of making it may well be explained. Inasmuch as gas is generally sold and handled by the 1,000 cubic feet, it seems proper to make that the basis for quantity, and one cent per kilowatt hour seems a natural base from which to calculate the cost of power, and should anyone have steam power or power other than electric, it is a simple matter to convert it to kilowatt hours.

CURVE SHEET No. 20

H.P. Cont.

484 5.8
475 5.7
468 5.6
460 5.5
452 5.4
444 5.3
436 5.2
428 5.1
420 5.0
412 4.9
404 4.8
396 4.7
388 4.6
380 4.5
372 4.4
364 4.3
356 4.2
348 4.1
340 4.0
332 3.9
324 3.8
316 3.7
308 3.6
300 3.5
292 3.4
284 3.3
276 3.2
268 3.1
260 3.0
252 2.9
244 2.8
236 2.7
228 2.6
220 2.5
212 2.4
204 2.3
196 2.2
188 2.1
180 2.0
172 1.9
164 1.8
156 1.7
148 1.6
140 1.5
132 1.4
124 1.3
116 1.2
108 1.1
100 1.0
92 0.9
84 0.8
76 0.7
68 0.6
60 0.5
52 0.4
44 0.3
36 0.2
28 0.1
20 0.0



LEGEND

COST OF COMPRESSING
1000 Cu. Ft. of Gas
Power Cost
1-Cent per H.P. Hour

1-Cent per H.P. Hour
1-H.P. Hour, 60,000 ft. lbs.
1-Cent would then produce
240,000 ft. lbs.
4 H.P. - 240,000 ft. lbs.
Then every 4 H.P. would
cost 4 Cents.

PIPE COST FORMULA
PER 1000 CU. FT. GAS

10,000 cu. ft. per H.P. A
10,000 ft. of pipe - B
1 cent per ft. cost
Then C = 10 cent per H.P. cu.
ft. gas and for quantity
of Q and length of pipe L
and price of pipe P in
Cents we have

$$C = \frac{60}{100} \times \frac{P}{L}$$

LOSS OF PRESSURE
IN PIPES

$P_1 - P_2 = \frac{0.00000125}{d^5}$
 P_1 Initial absolute pressure
 P_2 Final "
Q Quantity Cu. Ft. per Min
L Length in feet
d Diameter in inches
and
 $M^2 (P_1 - P_2) = \frac{Q^2}{d^5}$

Edward A. Ri-
Sept. 1906

Notes: Horse Powers are for 1000 Cu. Ft. per Minute.

If a kilowatt hour costs one cent, a horsepower will cost practically three-quarters of a cent, one horsepower hour = $60 \times 33,000$ or 1,980,000 foot pounds for three quarters of a cent, one cent would therefore produce $\frac{1,980,000}{.75} = 2,640,000$ foot pounds.

Eight horsepower equals 264,000 foot pounds, consequently every 8 horsepower will cost 1-10 of a cent per minute. This gives us the basis for our curve, for if we lay out our sheet in equal divisions of any size and call each one along the vertical line 8 horsepower, we can also make each division represent 1-10 of a cent, and each horizontal division we can conveniently call 10 pounds.

If you will now refer to Table 19, the last table which I read at our last meeting, it will be possible to construct the curve, remembering that the table is constructed for 100 cubic feet per minute, the horsepower therein contained must be multiplied by 10, for the 1000 feet capacity we are now considering.

Take, for example, 50 pounds gauge pressure, the brake horse-power required for 100 cubic feet is 14.56, and for 1000 would be 145.6. Where the vertical line indicating 50 pounds meets the horizontal line drawn from 145 horse-power will be a point on the curve. Similarly other points can be made, and joining the points together, we shall have a cost and power curve combined which will be very useful in our calculation.

I have constructed two of these curves, A and B. A is the curve of single stage compression and B for two-stage compression. Single stage is rarely used beyond 100 pounds pressure, nor two stage below 90 pounds pressure. You will note quite a difference in favor of two-stage compression. For example, at 100 pounds pressure it costs 2.35 cents per 1000 for two-stage and 2.75 cents for single-stage. In even a small plant using 50,000,000 feet per year, the difference would be \$200 per annum, which is well worth saving.

The two-stage curve may be readily constructed from the single-stage curve by remembering that the

intermediate absolute pressure between the stages is a mean proportional between the initial and final absolute pressure, and, inasmuch as it takes the same power for each stage, if we double the power required for the first stage we shall have the desired results, thus the intermediate gauge pressure for 200 pounds pressure will be 41 pounds. We note from the single-stage curve that 41 pounds requires 128 horse-power, consequently twice this is 256 horse-power, which, laid out on our curve sheet on the 200-pound vertical line, will give us the point N on the two-stage curve, and so on for other points to complete the curve.

It must be understood that the horse-powers are for 1000 cubic feet per minute, and the cost will be per 1000, and if you wish to eliminate the element of time just multiply the horse-power by 33,000 and the result will be the foot pounds to compress 1000 cubic feet of gas, and independent of time.

If power costs more or less than 1 cent per kilowatt hour, or the quantity to be compressed is greater or less than 1000 cubic feet per minute, the results may be read from the curve by simply using a corresponding proportion, for example:

The curve shows that 1000 cubic feet can be compressed to 20 pounds gauge pressure at the cost of 1 cent, it follows, therefore, that 2000 cubic feet can be compressed to 20 pounds for 2 cents, or if power costs 2 cents per kilowatt hour instead of 1 cent, then only one-half the quantity can be compressed for 1 cent, or double the quantity if power costs but $\frac{1}{2}$ a cent a kilowatt hour. This method of proportion, however, does not apply to the matter of pressure, for you will note that while a cost of 1 cent gives 20 pounds pressure, a cost of 2 cents gives 58 pounds pressure, and a cost of $\frac{1}{2}$ a cent gives only 8 pounds pressure. In other words, it costs just as much to compress gas from 0 to 8 pounds as it does from 8 to 20 pounds, and just as much to compress from 0 to 20 pounds as from 20 to 58 pounds. It would be well right here

to consider this fact, for it has a great bearing on high-pressure transmission.

If it was found, for example, that it was costing 1 cent per 1000 to deliver gas through a certain pipe at 20 pounds pressure, and it became necessary to double the pressure in order to supply an increased demand, the gas company might consider it inadvisable because it might double the cost. Consulting the curve, it will be seen that the cost for compressing at 40 pounds pressure is only 1.6 cents per 1000 cubic feet instead of 2 cents, as may be imagined, and this fact might justify the increased pressure, and the higher the pressure the more the seeming disproportion.

From the curve take a geometrical progression of gauge pressure, 5-10-20-40-80-160-320, and we note the corresponding costs of compression for 1000 cubic feet to be, in cents, .3-.575-1.00-1.6-2.4-3.-3.9, in other words, while the pressure from 5 to 320 has increased sixty-four times, the cost of compression has increased but thirteen times.

It must not, however, be hastily inferred that because of this decreasing power ratio that it is economical to compress at high pressure, because it may not be so and depends upon the amount of gas to be pumped, for while the rate for 1000 may be small and make no material difference where a small quantity is pumped, with a large quantity the total amount of the yearly cost of pumping may exceed so materially the interest and depreciation on a larger pipe using a lower pressure that the latter installation will be deemed preferable.

The question of whether a large pipe and small pressure, or a small pipe and high pressure shall be used is simply a matter of equating the relative costs of pumping, together with the interest and depreciation on the plant, and, with the curve given herewith, it may be easily determined, and it is to show how to make this determination quite accurately and simple that I have written this paper. It has seemed to me that the cost of attendance, buildings, laying out

pipe, etc., for any one problem may be neglected, for while it is an item of cost, it will be practically the same for whatever pipe you may select. We can then make our comparison, using the market cost of pipe and the cost of power only, to which may be added the other costs after the size of the pipe is determined, in order to give the total cost per 1000 for handling the gas.

The power and cost curves, as constructed, can be called "Standard" and white prints made from it, and upon these white prints the pipe curves laid out, as will be shown, and this same white print can be used in all cases. Let us then take two examples, one for small quantity and one for large quantity, and before starting at it let us make a general standard formula, which will simplify many of the calculations.

No plant will pump less than 10,000,000 cubic feet per year, which is about 1200 per hour, or at a less distance than 10,000 feet, consequently take for a basis:

10,000,000 feet per year= a

10,000 feet of pipe= b

1 cent per foot cost of pipe

10% per annum interest and depreciation
on the pipe.

Then equating these quantities we will find that the pipe cost C for 1000 cubic feet of gas will be $1/10$ of a cent.

For any other quantity Q , and length of pipe L , and price of pipe P , we shall have:

$$\text{Pipe cost per 1000 } C = \frac{L a}{b Q} \times \frac{P}{10}$$

Example 1—50,000,000 cubic feet per year, or 6000 per hour, 50,000 feet of pipe, and power to cost $1\frac{1}{2}$ cent per kilowatt hour, substituting in our formula

$$C = \frac{L a}{b Q} \times \frac{P}{10} \text{ we have } C = \frac{50,000 \times 10,000,000}{10,000 \times 50,000,000} \times \frac{P}{10} = \frac{P}{10}$$

That is to say that whatever size pipe we select the pipe cost per 1000 cubic feet of gas will be $1/10$ the market cost of pipe per foot.

Taking the market prices of to-day, then if we should use:

1¼ pipe, cost per 1000 cubic feet, equals.....	.559
1½ pipe, cost per 1000 cubic feet, equals.....	.67
2 pipe, cost per 1000 cubic feet, equals.....	.894
2½ pipe, cost per 1000 cubic feet, equals.....	1.429
3 pipe, cost per 1000 cubic feet, equals.....	1.875

Having thus blocked out the matter of pipe, we must find what pressure it is necessary to use to pump the gas through these various sized pipes, assuming always that the terminal pressure shall be one pound gauge.

You will remember that we developed a formula in my paper, read last year, which may be used here with accuracy.

$$P_1^2 - P_2^2 = \frac{.00035 \times Q^2 L}{d^5} \text{ where } P_1^2 - P_2^2$$

is the difference between the squares of the initial and final absolute pressures.

Q is the quantity of gas in cubic feet per minute.

L is the length of pipe, in feet.

D is the pipe diameter, in inches.

Substituting in this equation the elements in our problem, we have:

$$P_1^2 - P_2^2 = \frac{35 \times 100 \times 100 \times 50,000}{100,000 \times d} \text{ or } P_1^2 - P_2^2 = \frac{175,000}{d^5}$$

Then $P_1^2 \times P_2^2$ equals for

1¼ pipe	57,370
1½ pipe	23,000
2 pipe	5,500
2½ pipe	1,800
3 pipe	700

P_2 being our final pressure 1lb. or 15.7 lbs. absolute makes $P_2^2 = 246$, and remembering that $P_1^2 - P_2^2 = (P_1^2 - P_1^2 + P_1^2 - P_2^2)$

we have

1¼ pipe	P_2^2 absolute	= 57,616	then	P_1 gauge	= 225 lbs.
1½ "	"	= 23,246	"	"	= 140 "
2 "	"	= 5,746	"	"	= 61 "
2½ "	"	= 2,046	"	"	= 31 "
3 "	"	= 946	"	"	= 16 "

Now we are ready to put all this on our curve sheet in order that we may have a graphic representation of

the situation. The power cost curve is on a basis of 1 cent per kilowatt hour; if, therefore, we plot any other costs on this standard sheet, they must be increased or diminished by the ratio the actual power cost bears to the standard power cost of 1 cent per kilowatt. Our problem calls for a power cost of $\frac{1}{2}$ cent per kilowatt hour, consequently we must plot in our pipe costs at double their real amount, for the standard power cost curve is double the cost stated in our problem. Take, then, the 2-inch pipe. We have found the pipe cost to be .894, which, multiplied by 2, equals 1.798, and the initial pressure required is 61 pounds. If then we lay off the point P on the 61 pounds pressure ordinate and opposite the cost Line 1.798 or 1.8, we shall have the two-inch pipe established, and similarly we can establish the other points, and joining them by lines we have a pipe cost curve S. C., which shows the cost of pipe per 1000 cubic feet of gas for all sizes from $1\frac{1}{4}$ to 3 inch. It is evident that the total cost of pumping the gas is the pipe cost plus the power cost, consequently if we add the pipe cost curve to the power cost curve, we shall have a curve of total cost. Take the 2-inch pipe once more, and with dividers measure off the distance W. P., the cost of the pipe line, and add it to the line W. Y., which is the power cost, and we have the point T., as the result of the addition. Do the same for the other sizes of pipe, join these points by lines, and we have the curve D. F. as the final result, showing the combined power and pipe cost per 1000 cubic feet of gas for all the sizes of pipe under consideration.

It is evident at a glance that the 2-inch pipe shows the least cost, consequently the solution of our problem is 2-inch pipe at 60-pound initial pressure. Total cost per 1000 3.6 cents on a basis of 1 cent per kilowatt hour, but as our power costs $\frac{1}{2}$ a cent per kilowatt hour, the total cost is 1.8 cents per 1000 cubic feet of gas.

The graphical method is very satisfactory, for one can see at a glance the relations between the various

elements, for example: You will note that it cost practically the same to pump this gas through a $1\frac{1}{4}$ -inch pipe at 225 pounds pressure or a $1\frac{1}{2}$ -inch pipe at 140 pounds pressure or the 3-inch pipe at 16 pounds pressure, which is interesting.

PROBLEM TWO.

Take 5000 cubic feet per minute, 300,000 per hour or 2,500,000,000 per year, through the same length pipe as in our former problem, and at the same power cost per kilowatt hour. The pipe being the same length and the quantity fifty times greater. We will have

$\frac{P}{500}$ for pipe cost per 1000 where we had $\frac{P}{10}$ formerly, and taking pipe casing prices up to 12 inches, which was the largest I could get, and assuming them above that size simply for illustration, we find the following prices per 1000 feet of gas for these pipes:

10 inch equals .25 cent per 1000 cubic feet of gas.

12 inch equals .30 cent per 1000 cubic feet of gas.

14 inch equals .40 cent per 1000 cubic feet of gas.

16 inch equals .60 cent per 1000 cubic feet of gas.

18 inch equals .80 cent per 1000 cubic feet of gas.

20 inch equals 1.00 cent per 1000 cubic feet of gas.

and the respective pressures necessary to force the gas through these pipes to be:

10 inch equals 53 pounds. 16 inch equals 12 pounds.

12 inch equals 26 pounds. 18 inch equals 8 pounds.

14 inch equals 20 pounds. 20 inch equals 4 pounds.

Multiply the pipe cost by 2 and transferring those quantities to our curve sheet, precisely as we did in the other problem, we have a pipe curve, E, showing the pipe cost per 1000 cubic feet, and adding this to the power curve, we have the final result in the curve F, which shows this rather surprising fact, that the 12-inch pipe is the best, and that it will carry this gas at 26 pounds pressure, and at a cost of $\frac{8}{10}$ of a cent per 1000 for power and pipe.

The curve shows also that the gas can be put through the 10-inch pipe at 53 pounds pressure at the same

cost as through the 20-inch pipe at 4 pounds pressure. I believe this graphical method will be of service to you, particularly as these curve sheets can be filed away and always used for quick reference, for the eye can take in the whole relative situation at a glance. I believe this method of handling the subject removes it from the realm of speculation, and makes an orderly comparison of power and pipes possible, to the end that an adequate selection can be made.





—

THE JOURNAL OF THE AMERICAN MEDICAL ASSOCIATION

•

THE JOURNAL OF THE AMERICAN MEDICAL ASSOCIATION








THE UNIVERSITY OF CHICAGO PRESS













THE UNIVERSITY OF CHICAGO PRESS

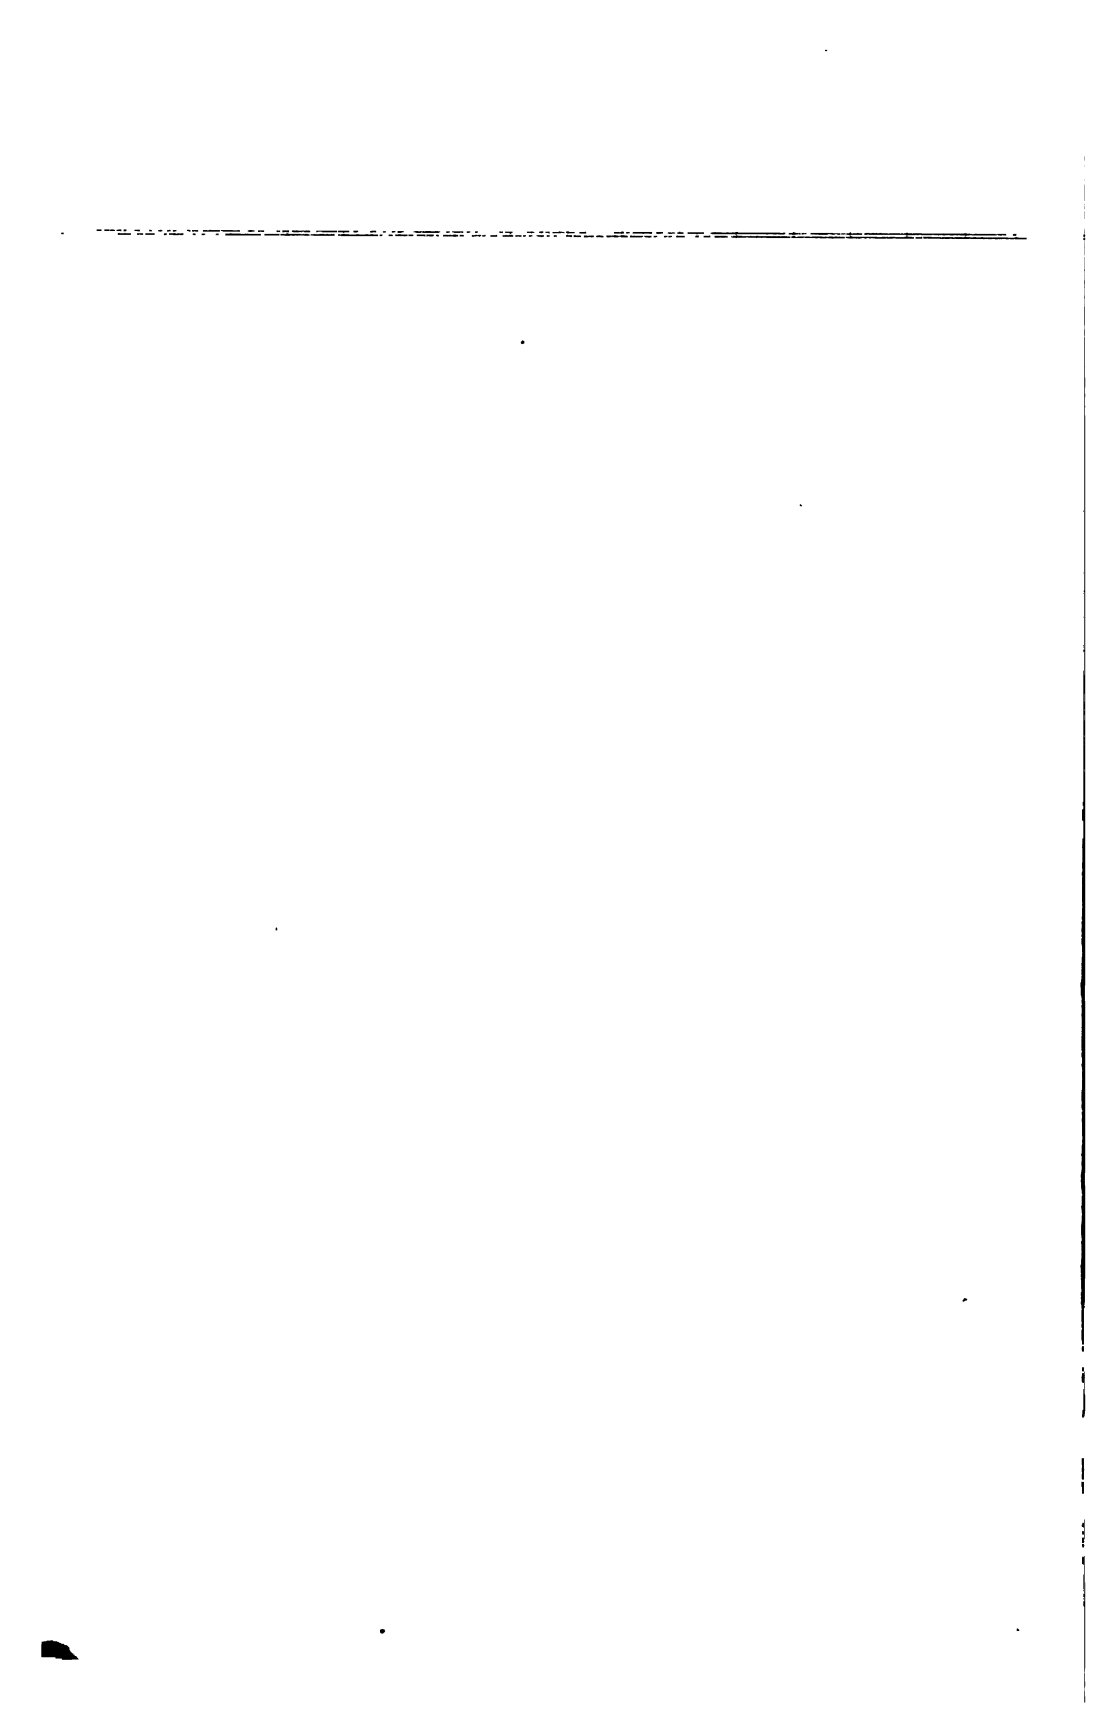







1. The first part of the document is a list of names and addresses of the members of the committee.

.....

.

.

.

.


.
















AN INITIAL FINE OF 25 CENTS

[illegible]

LD 21-100m-8,'34

YB 10364

171853
TP 751
.5
TP 5

